

Инструкция ЛЕГО (Lego) 31029-2

# CREATOR

31029

 


[LEGO.com/creator](http://LEGO.com/creator)




2x

1

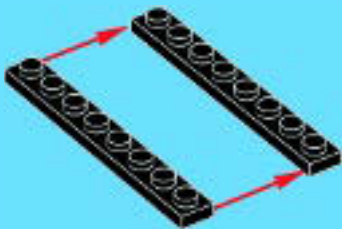

2

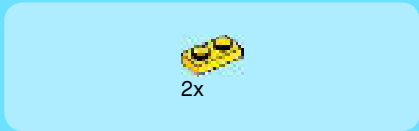 

2x

2



2x

 
3






4x

4

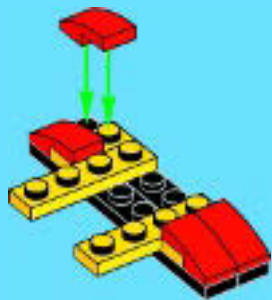

2x

 5

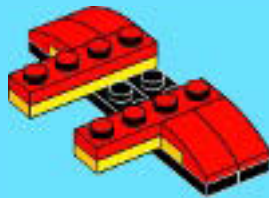



1x



1x

 
6




1x

7



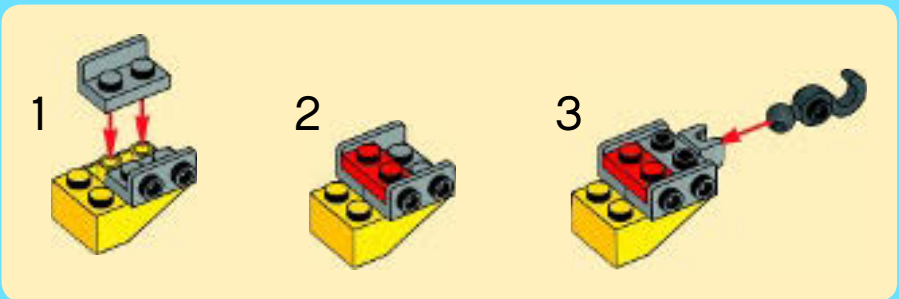

8

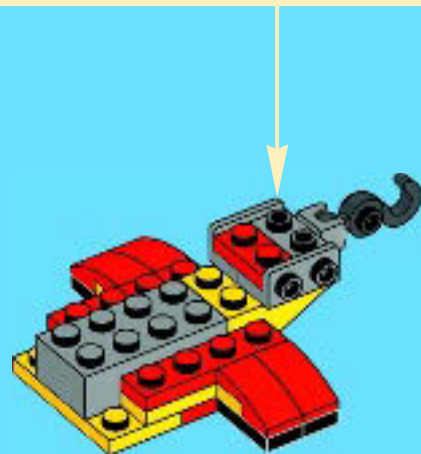 




1x



2x

 9

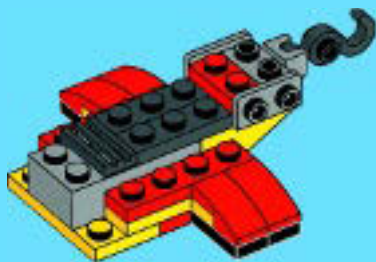



4x

 


2x

10



2x

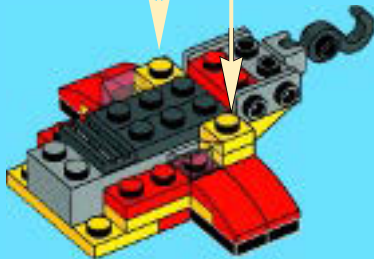

4x

 


2x

11



2x

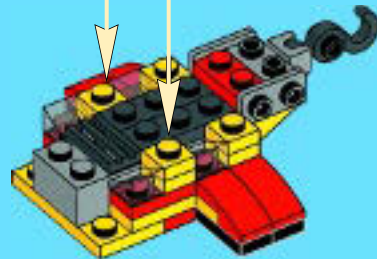




1x




1x

# 12

 1

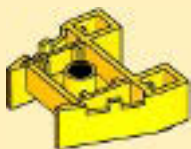

2

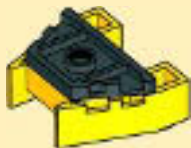 





2x



2x

# 13



2x





1x



1x

14



10



2x

15





2x

16



2x

1x

17





2x



1x

# 18



12



1x

# 19





1x

1



1x

2



3

1x

 
 


4

1x




1x

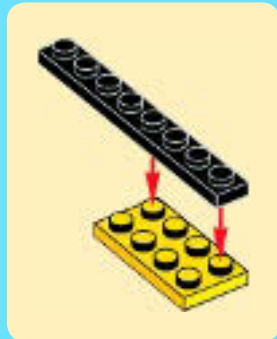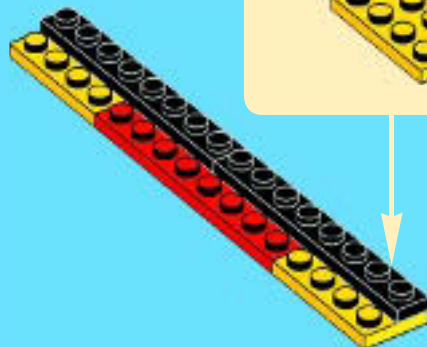




2x

 5

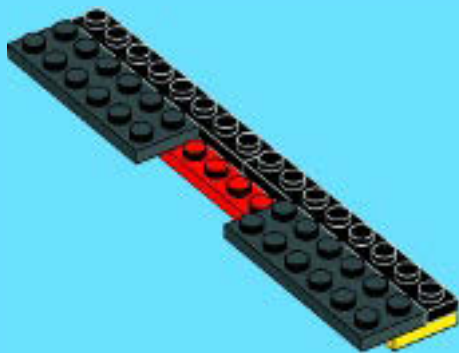

2x

 
6

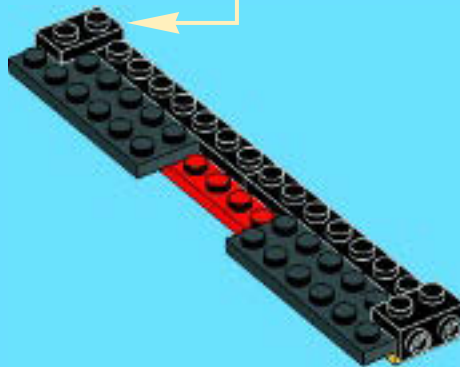



2x

 7

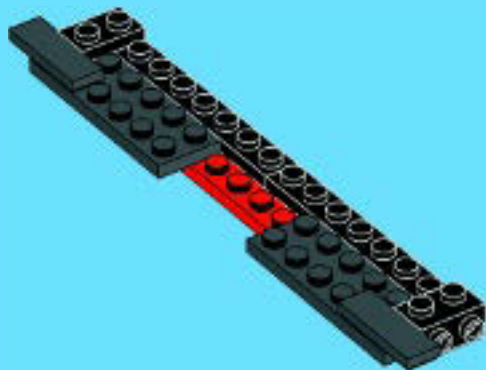

16

 


1x



1x

8

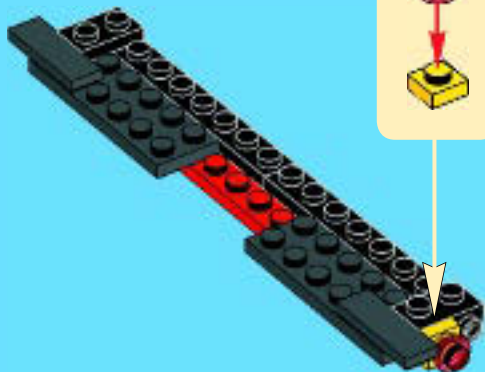






1x




1x

 9

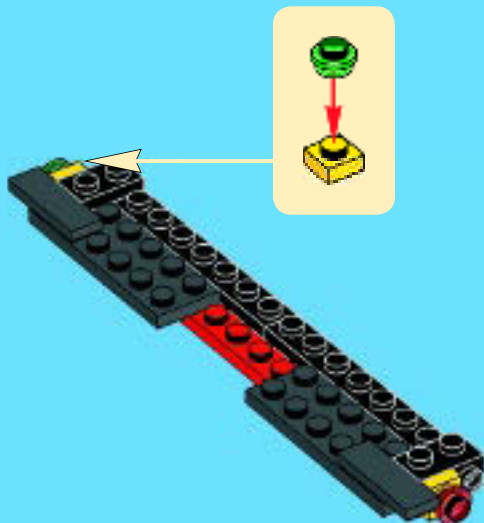

2x

 10

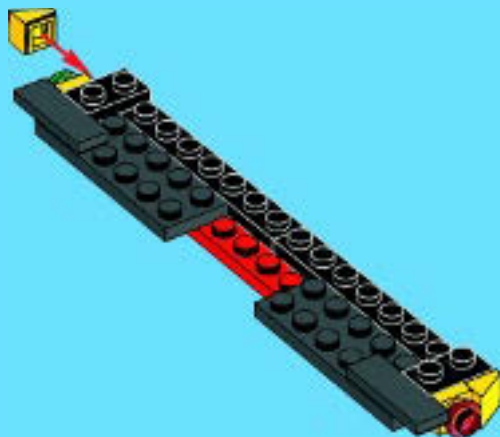



2x



1x

20





3x




3x




3x

# 21

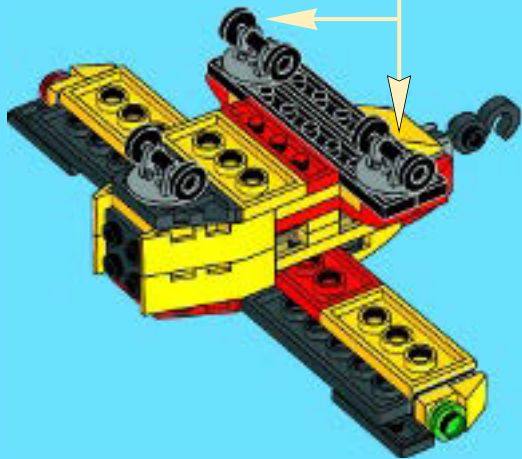 

1x

# 1

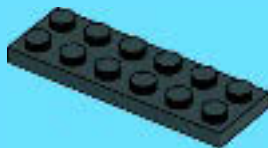 



1x

2

 


1x



1x

3

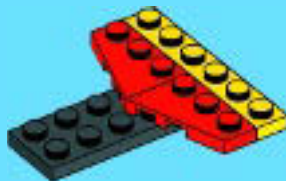



1x



2x

4



1x

5





1x



1x

6



 
1x

7





22

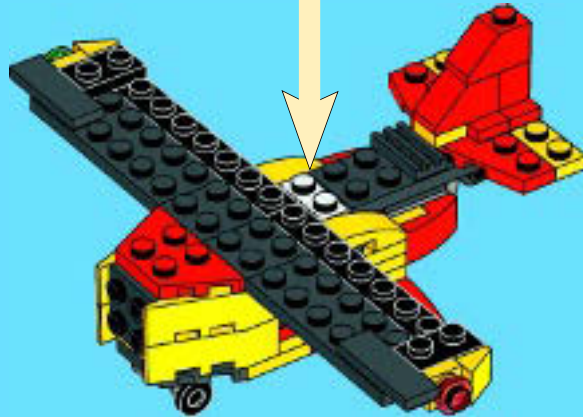



2x

23










1x



1x

# 26

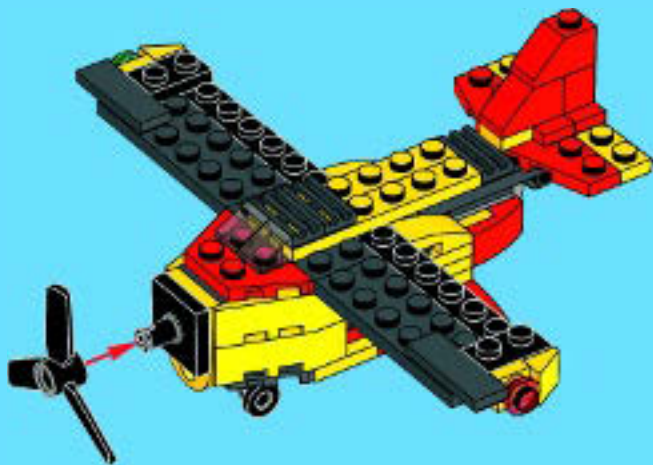 



1x



1x



1x



1x



2x

# 27

## 1



## 2



## 3



## 4



5

