

Инструкция ЛЕГО (Lego) 42028-1



TECHNIC

 
42028

 
 


1



2


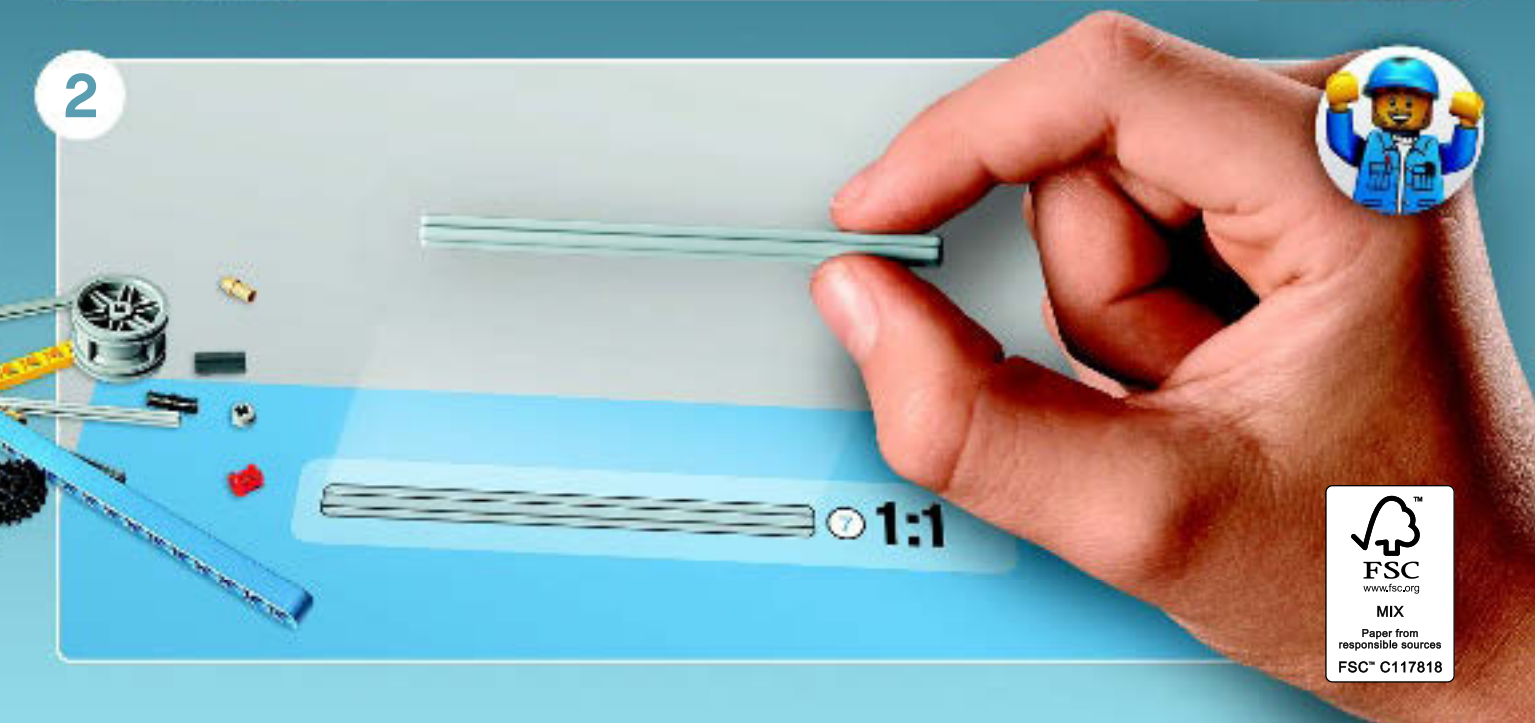


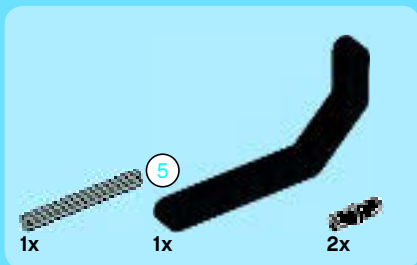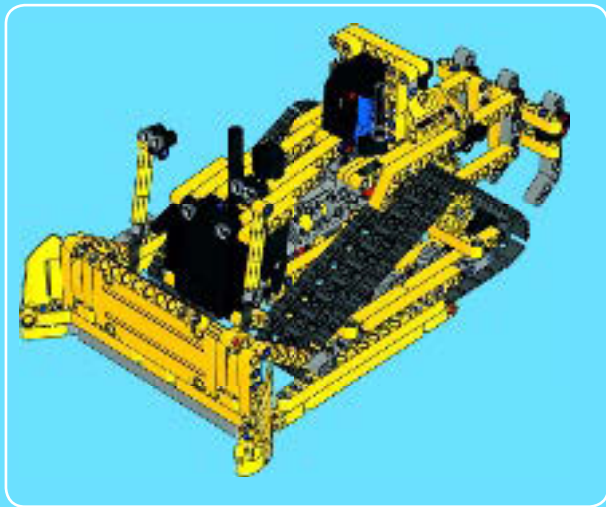

1




  2

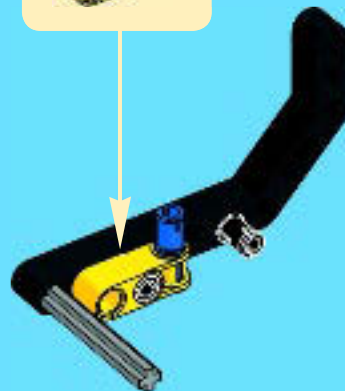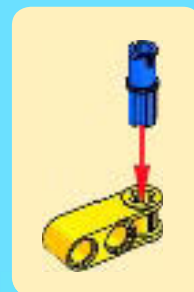




3





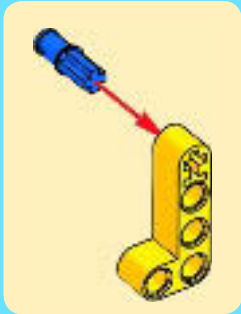 


4





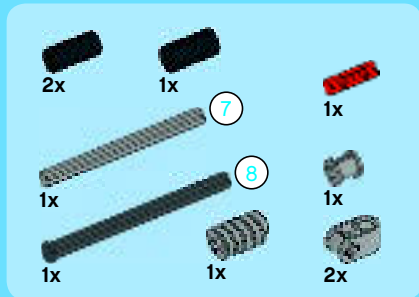 


5

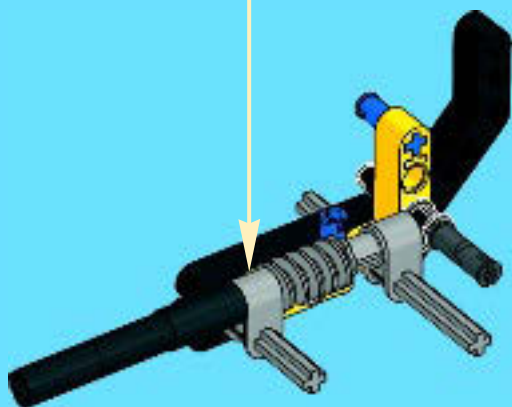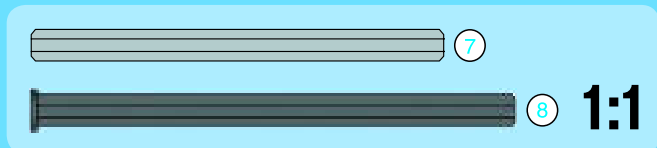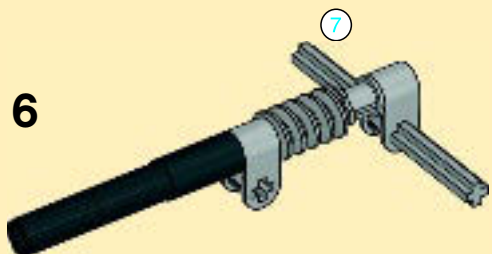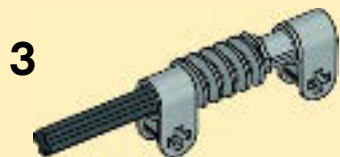    
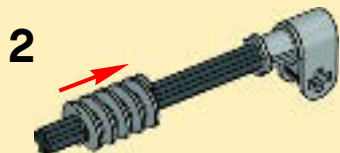 






6

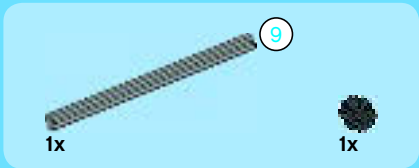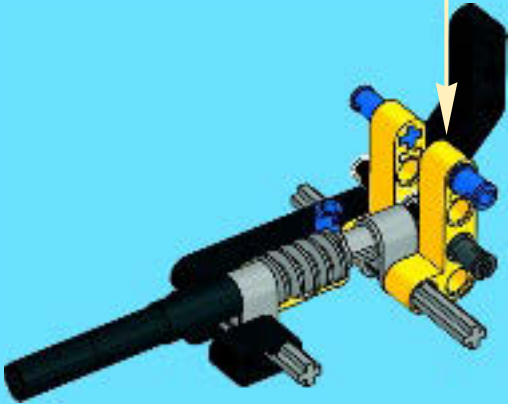  
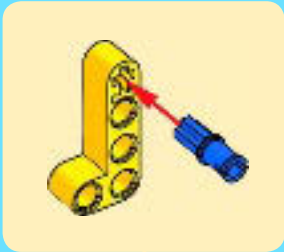 



7

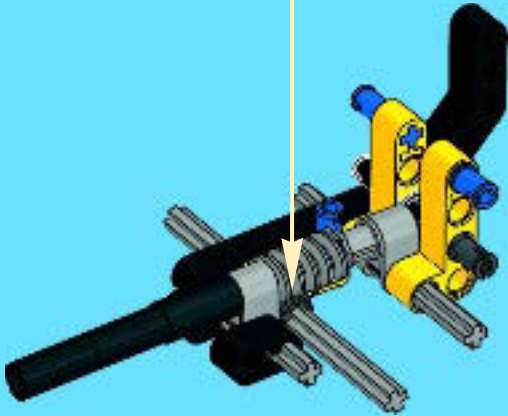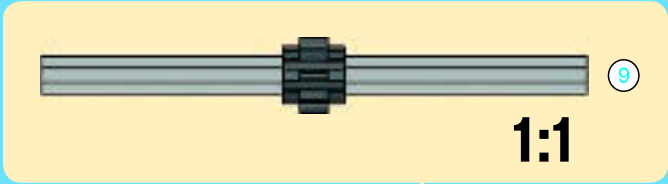  

 
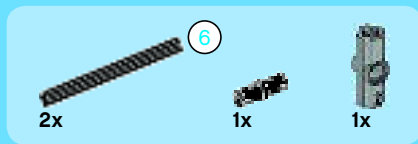 


8

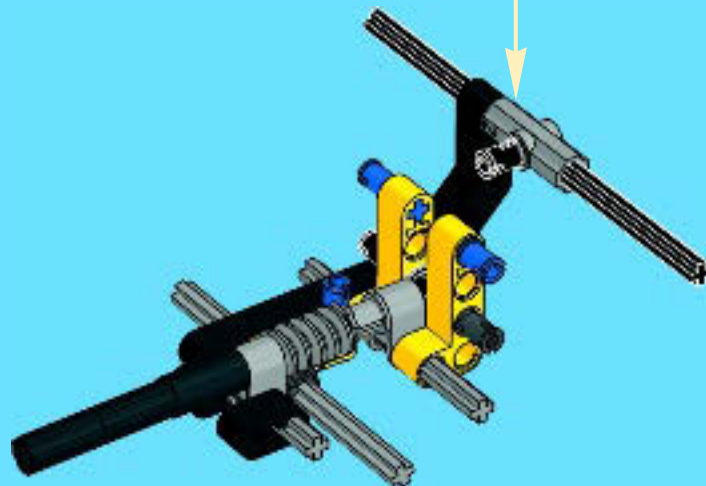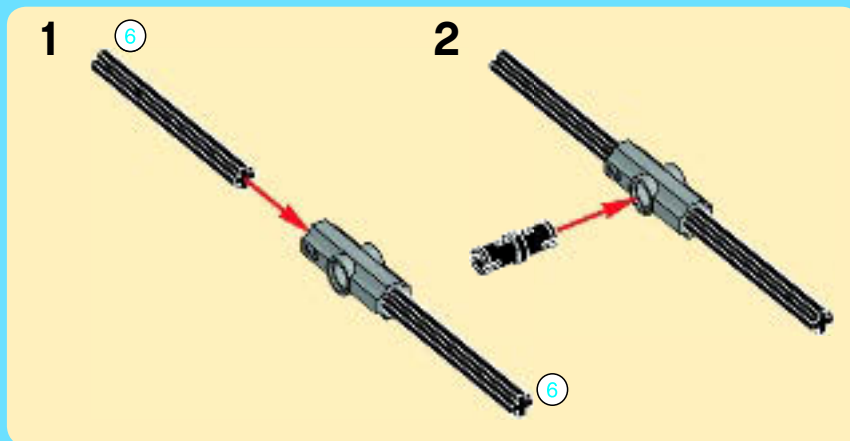  

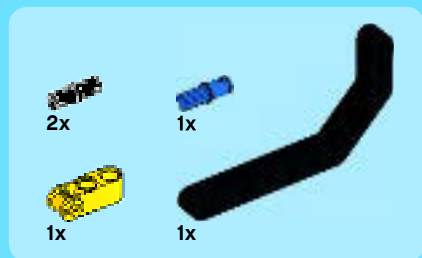 



9

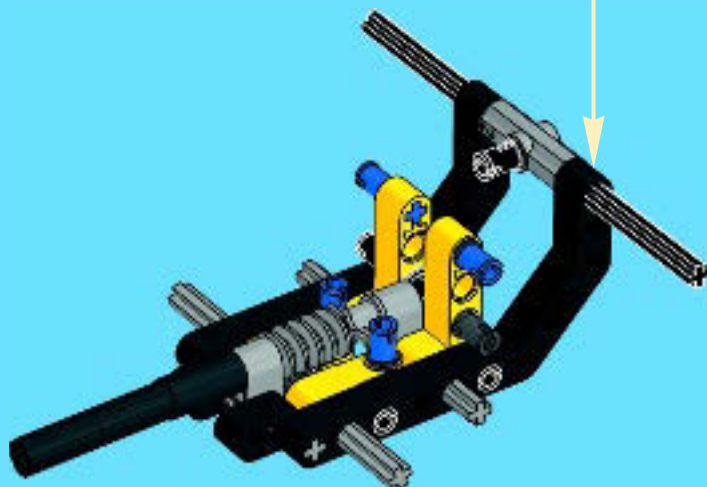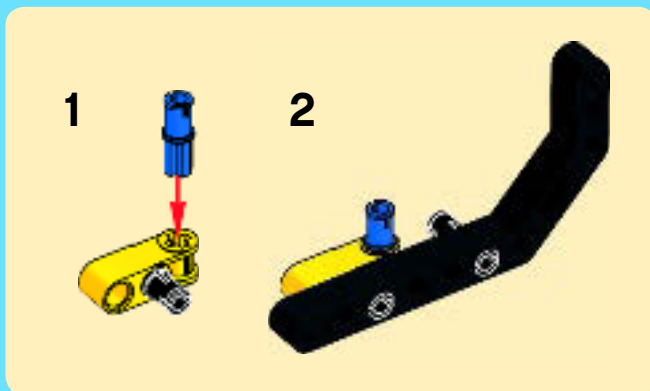  


4x

2x

 
 
10

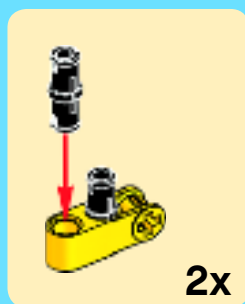
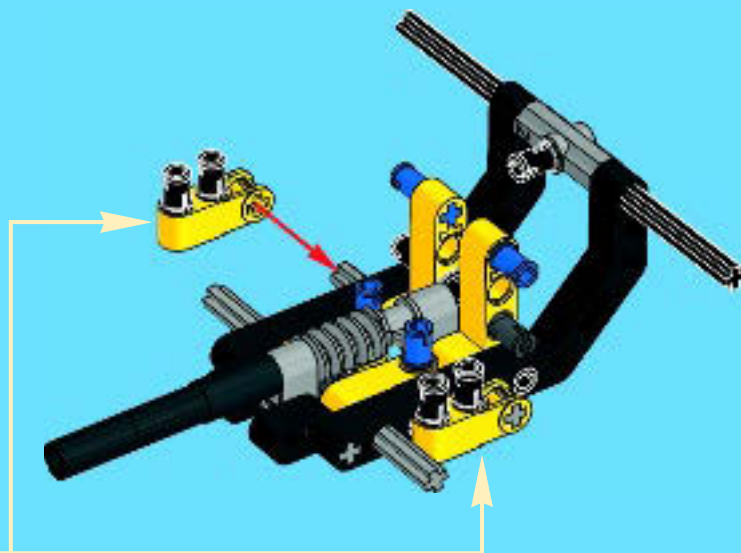


2x

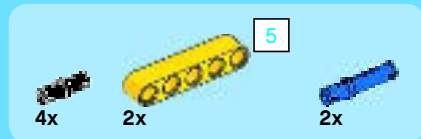 


11

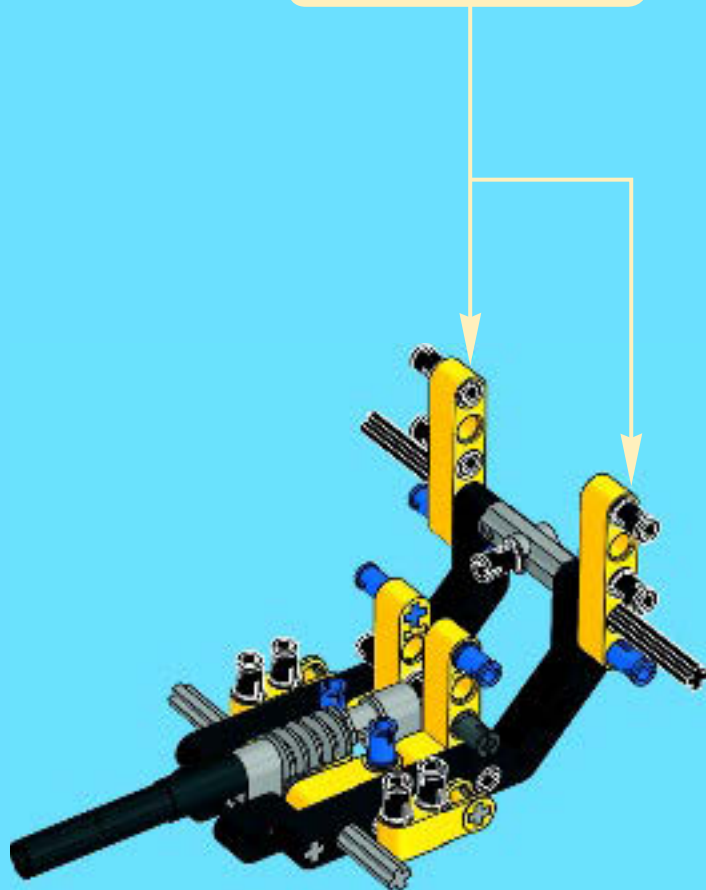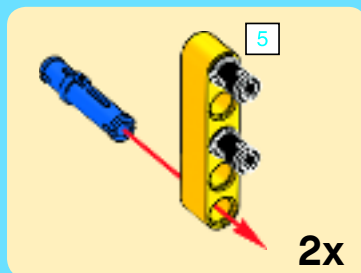  

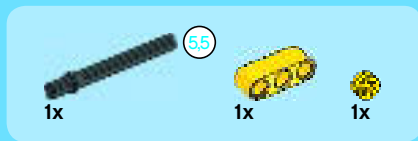  


12

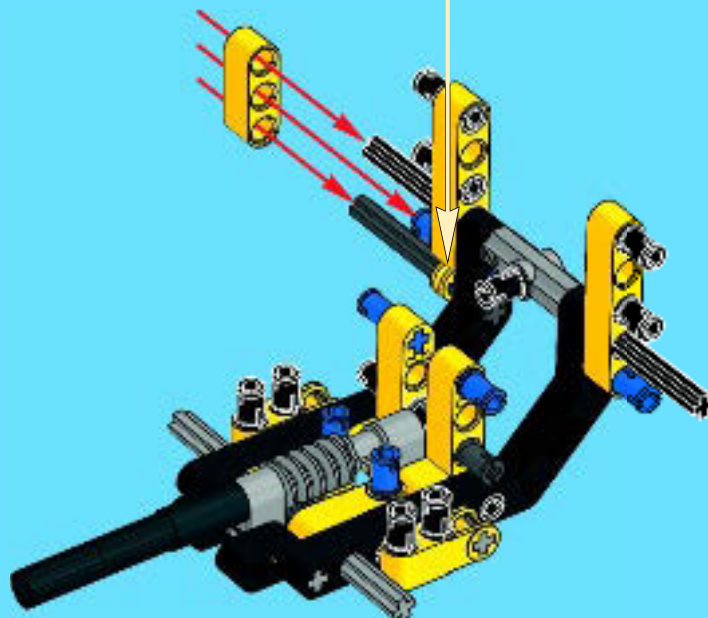 



5.5 1:1

 
13

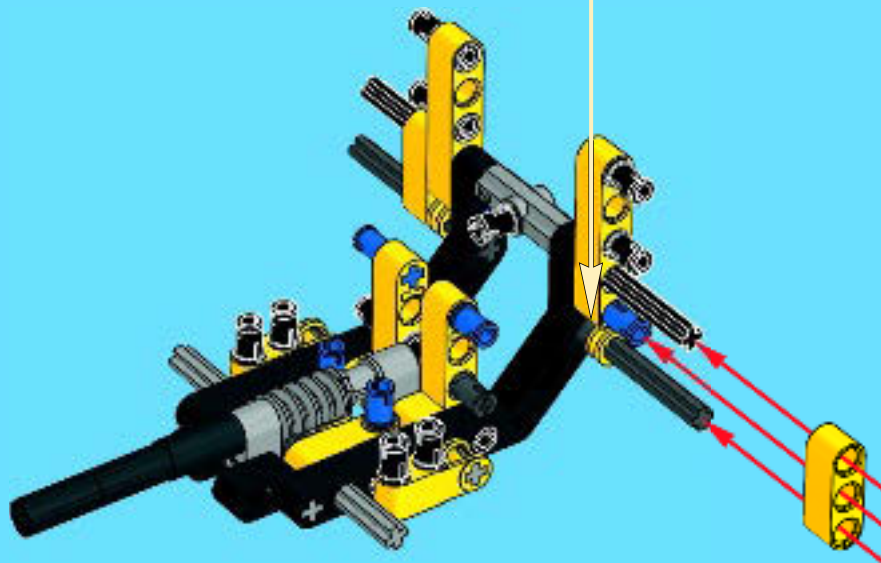







2x

 14

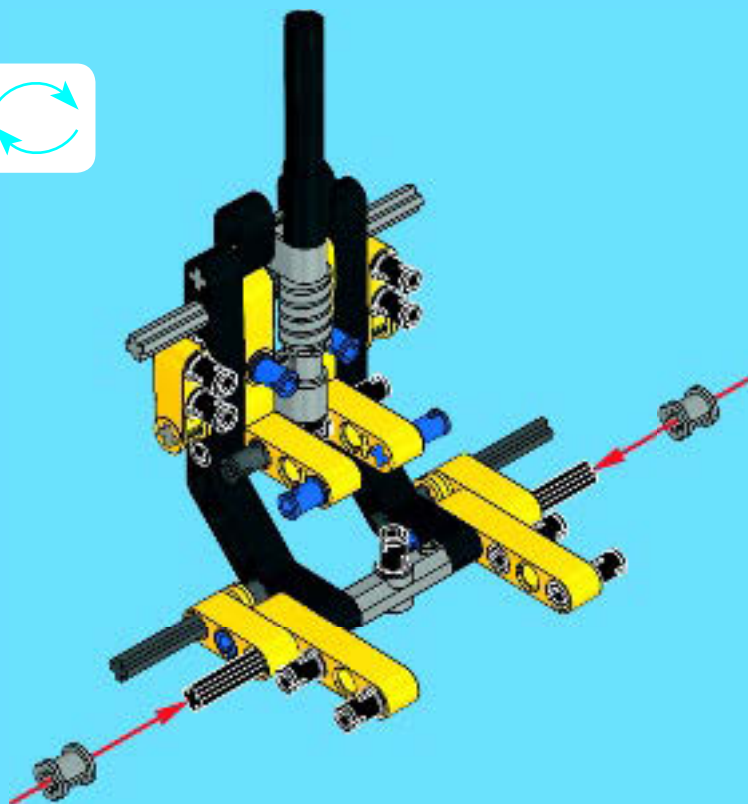

15

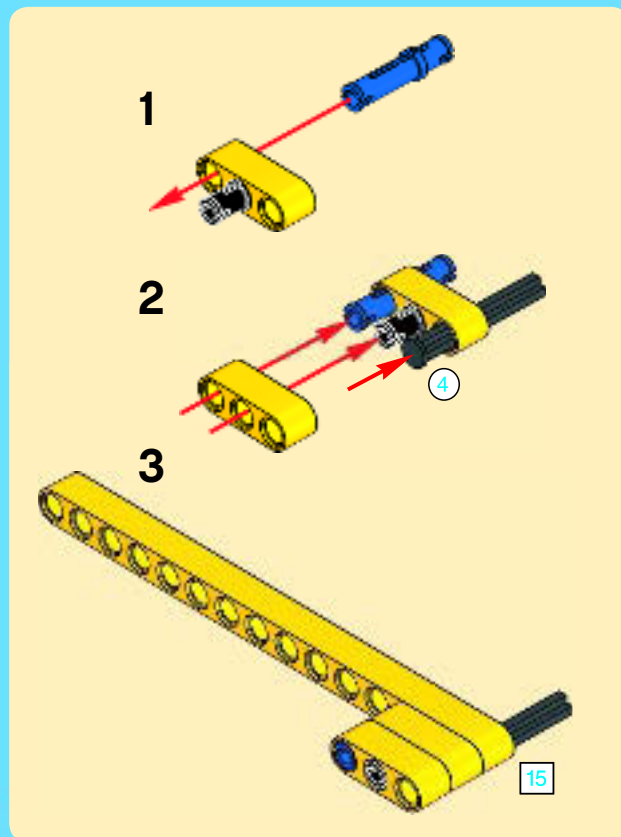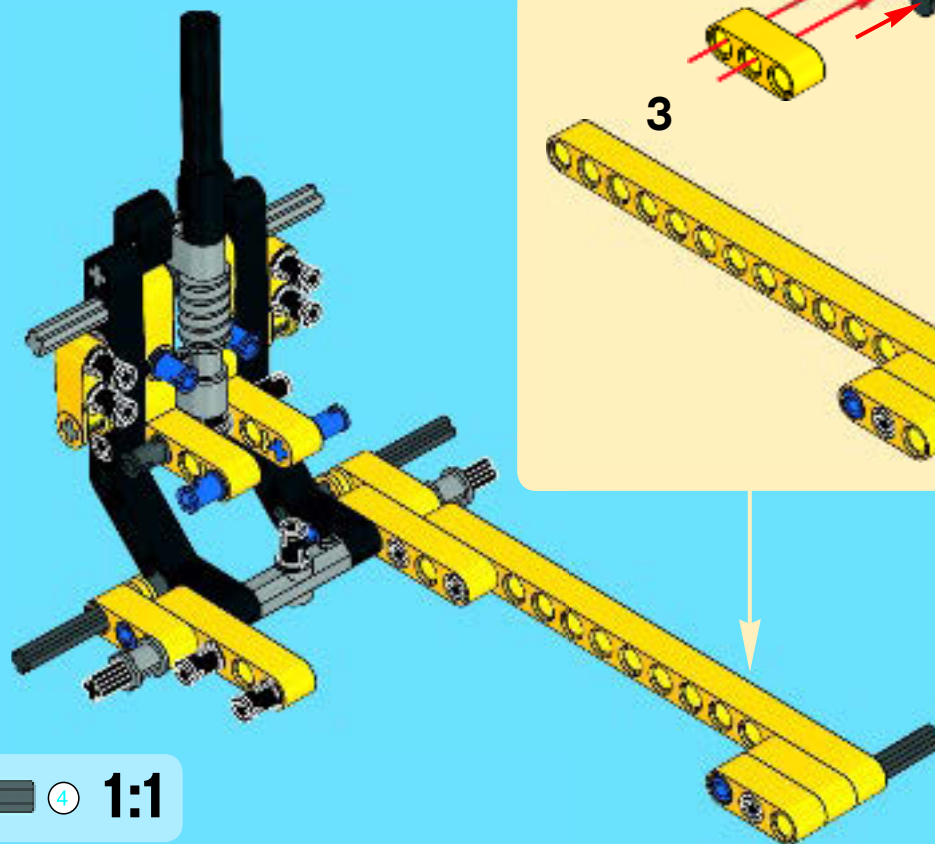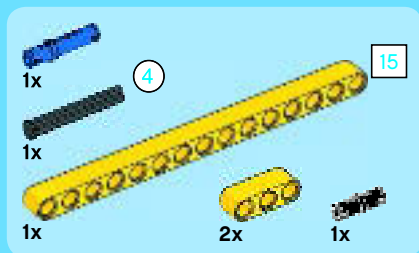    



9

1:1



 
9

1x



1x

1

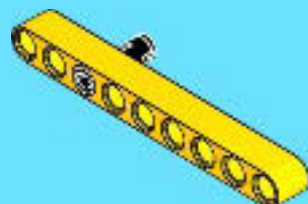

9



1x

 


 
 
1x






1x

2

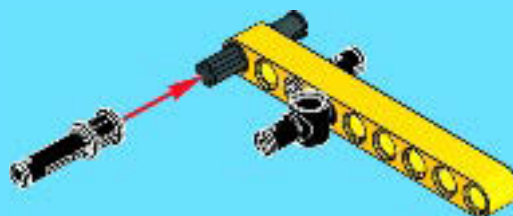

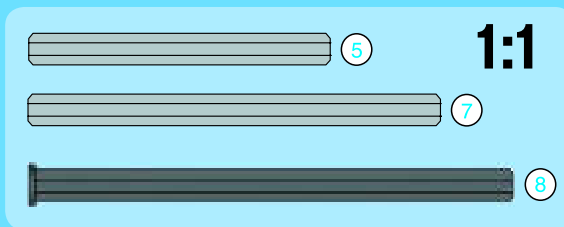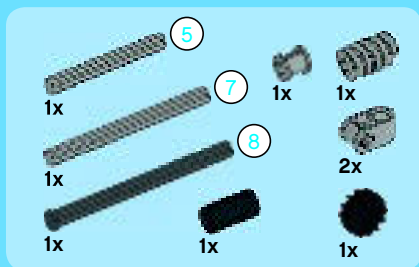



3

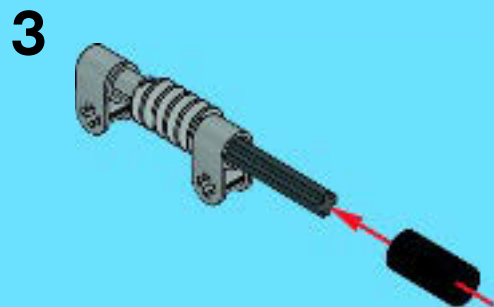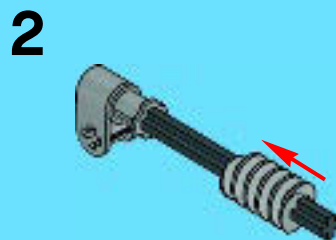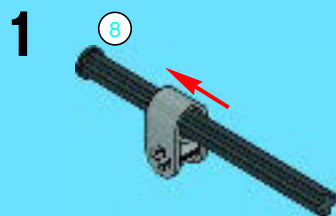   


4





   5

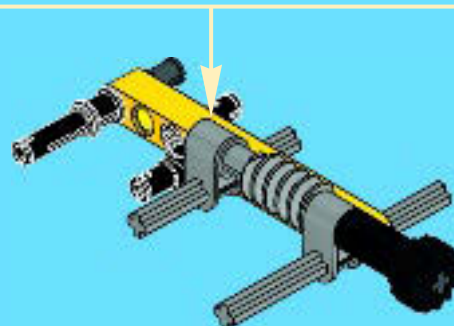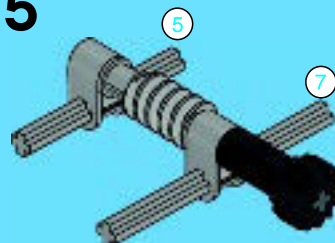


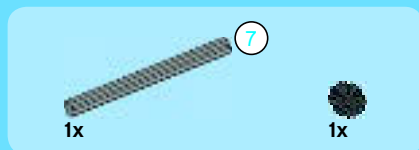

4

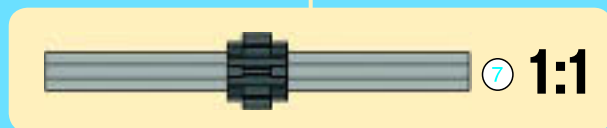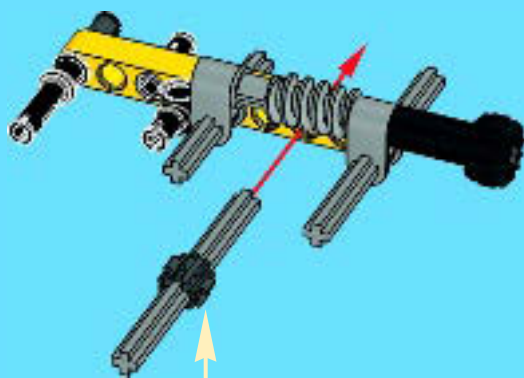  


5

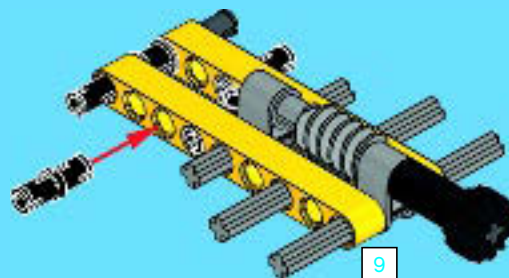 

2x


2x

 6

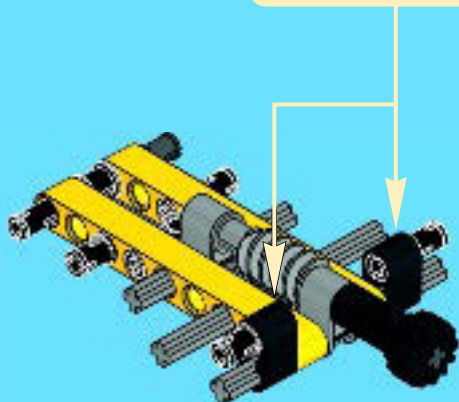


2x

 
7

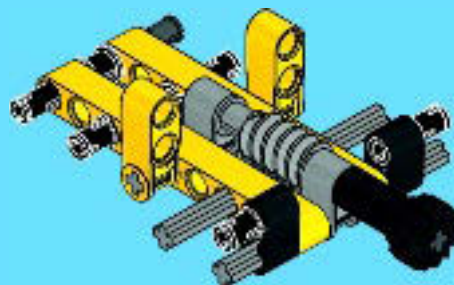

16

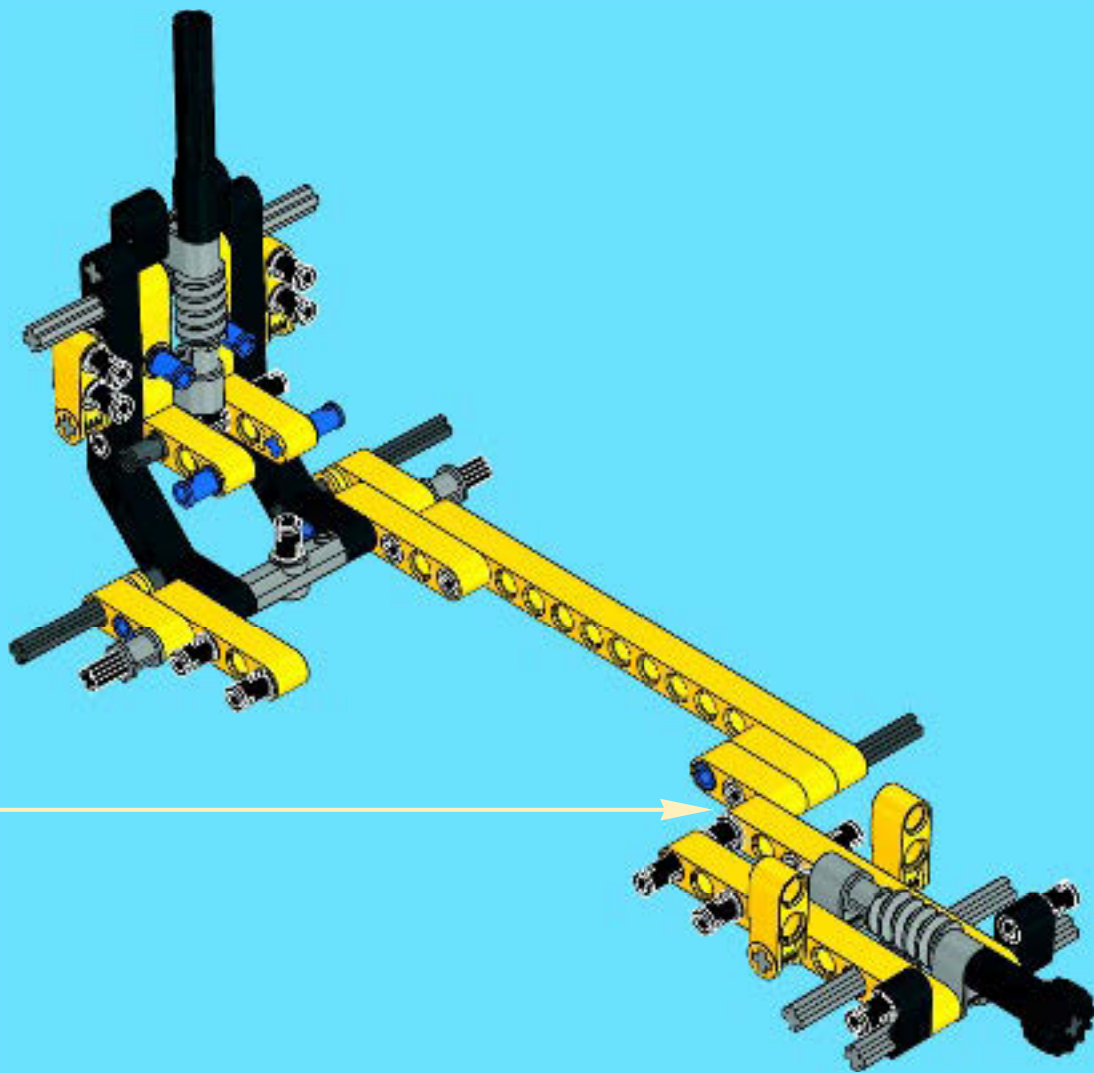 


17

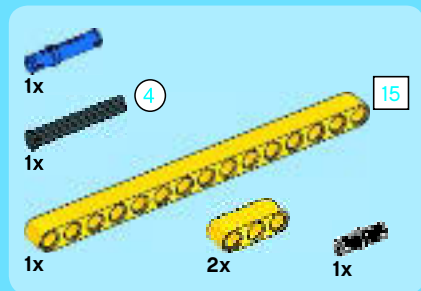 

1





 2

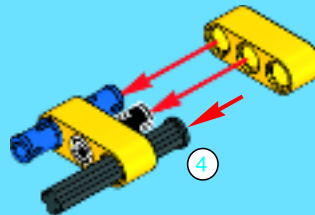

15

  3

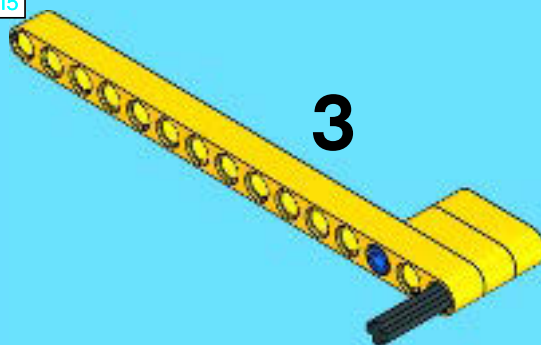


4





15

 1:1

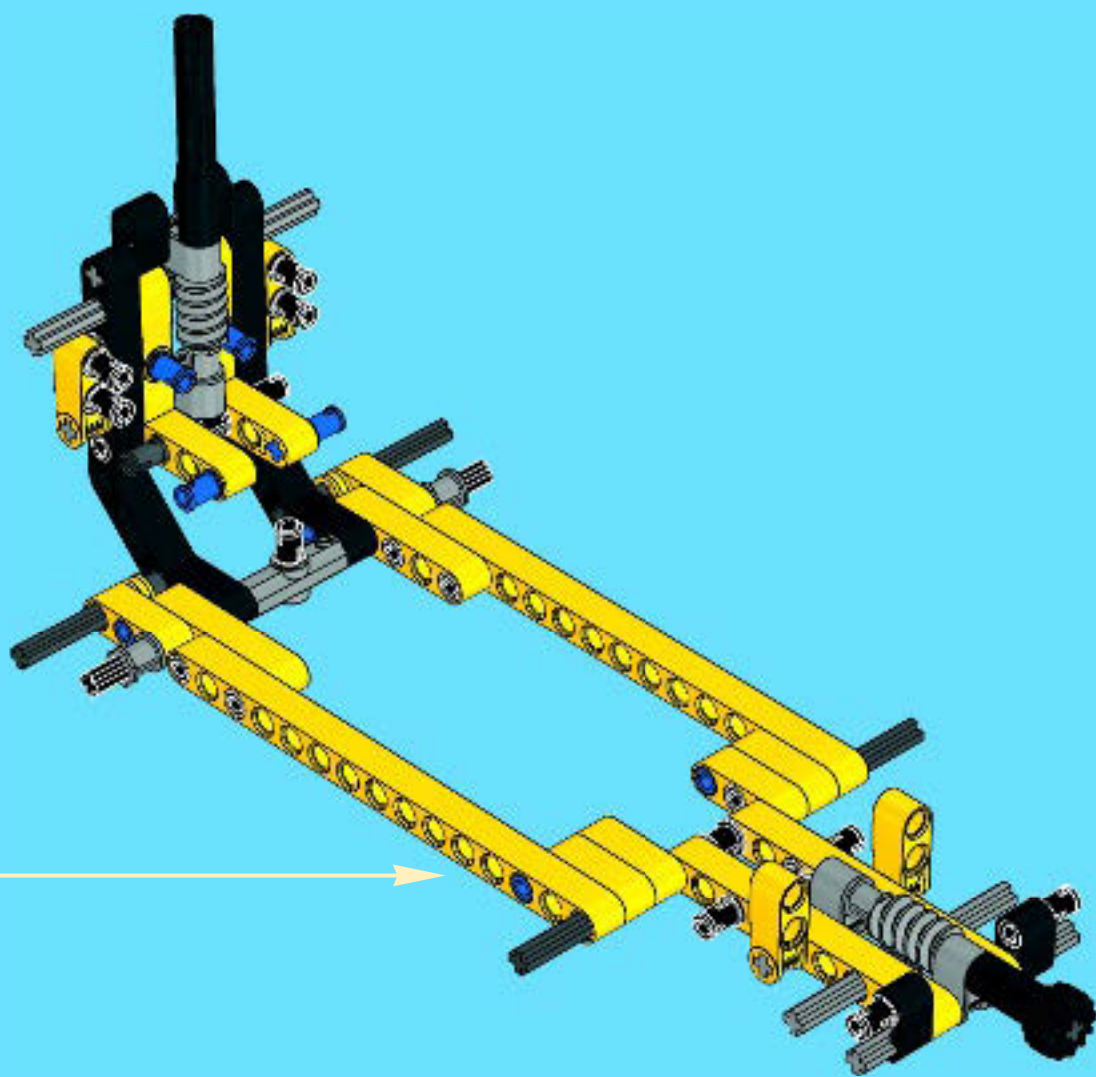



18

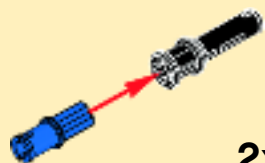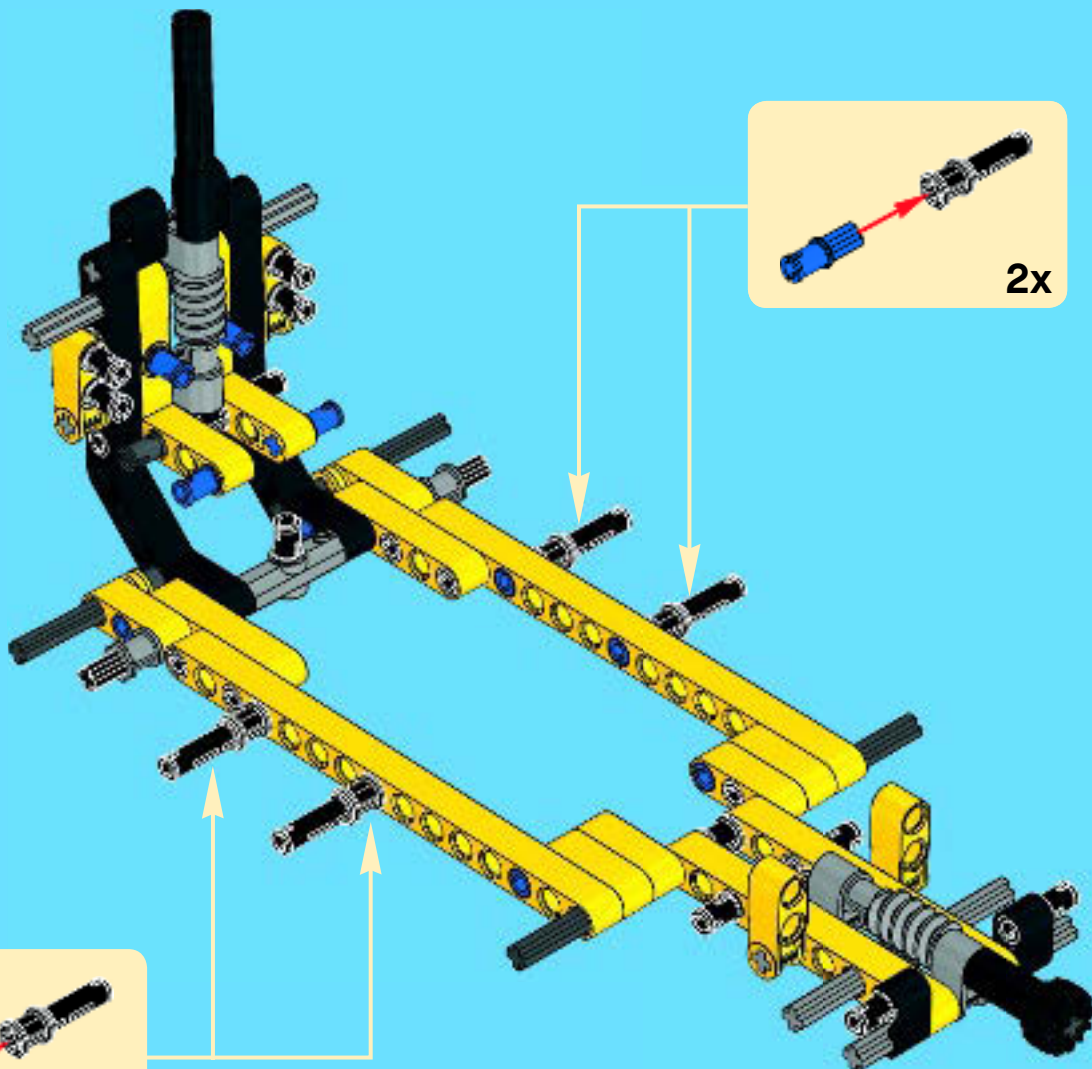  

2x

 


4x



2x

19

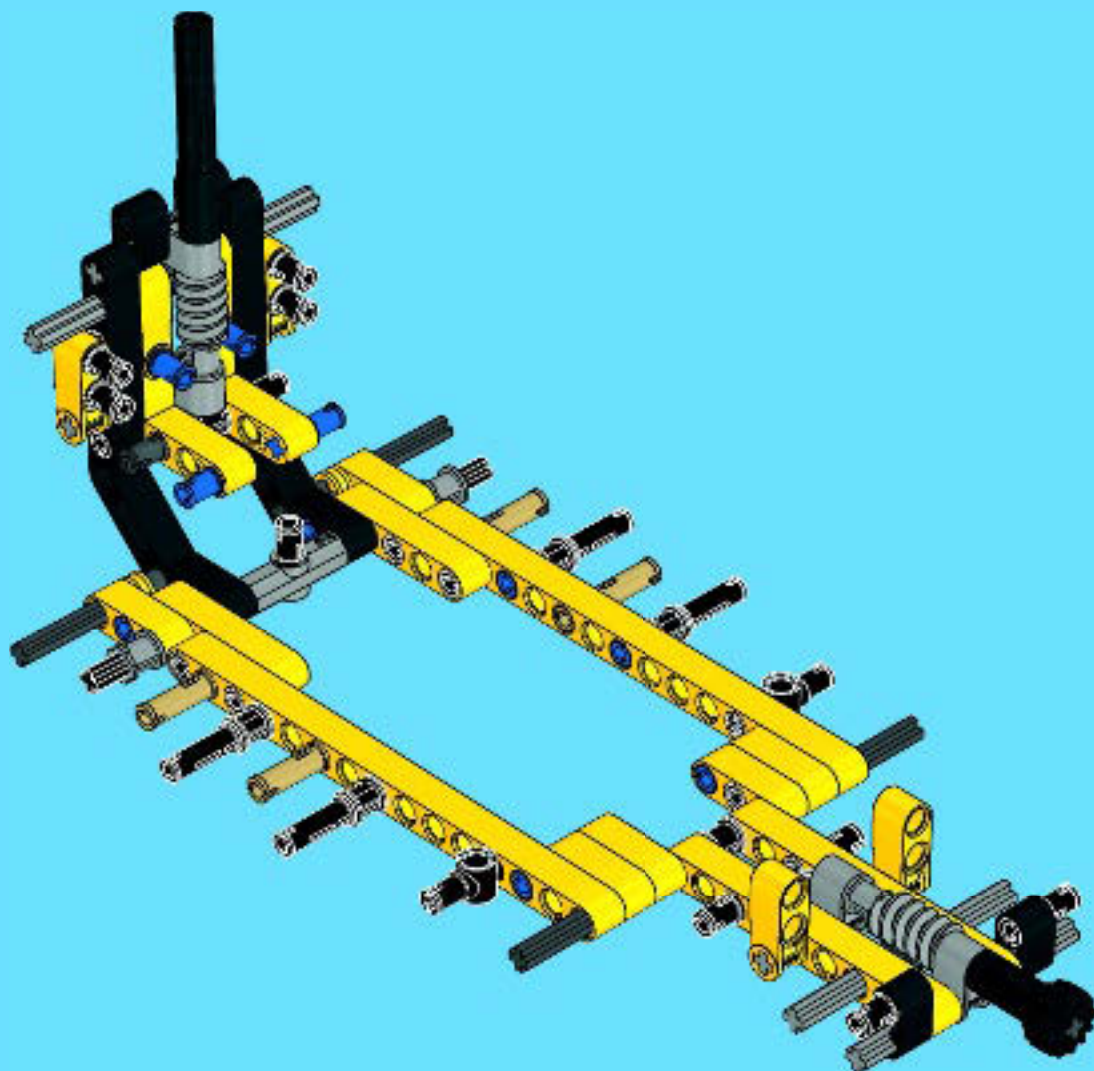





4x




4x

  20



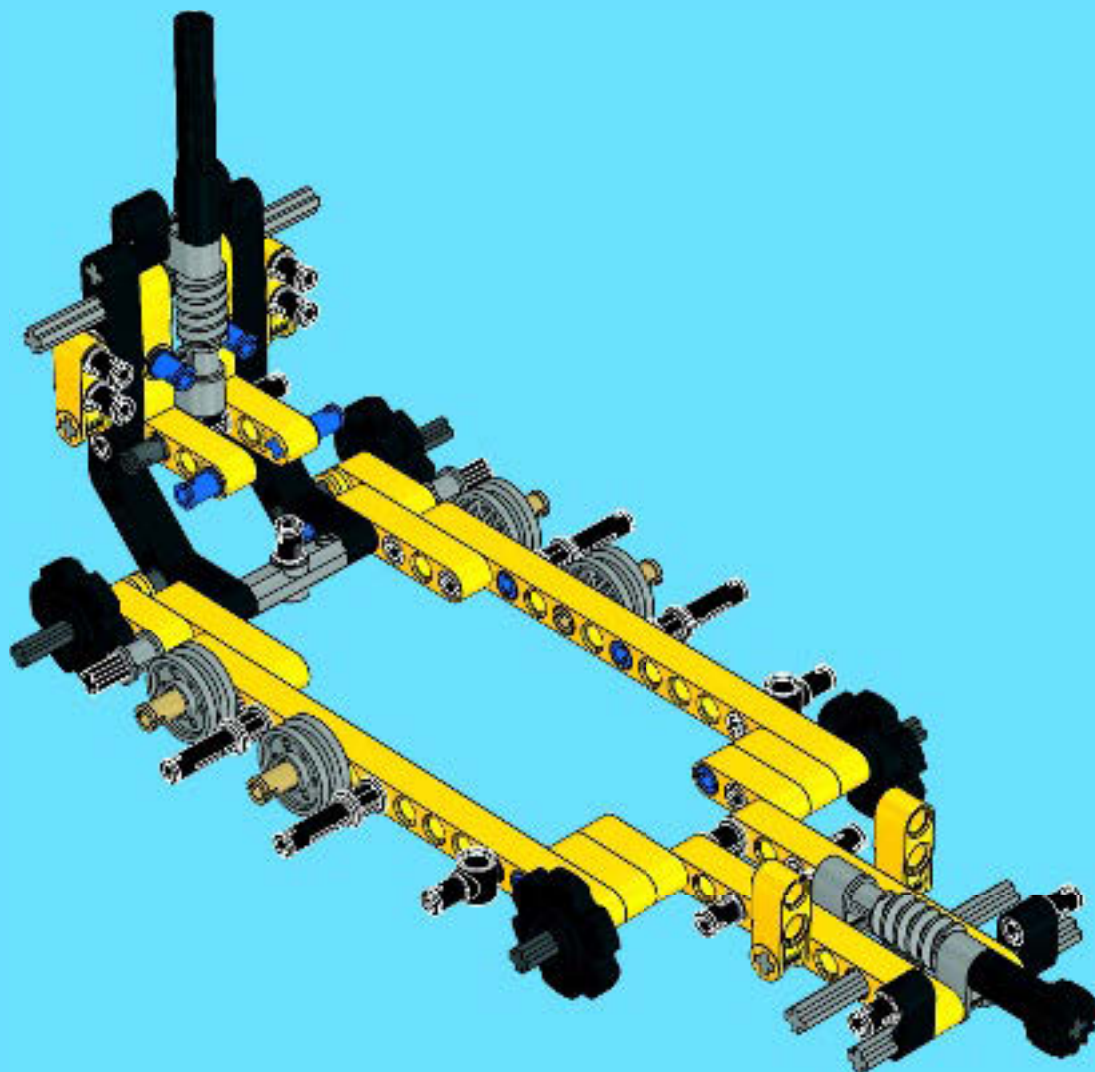


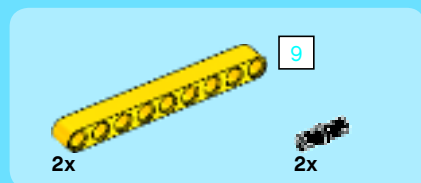

21

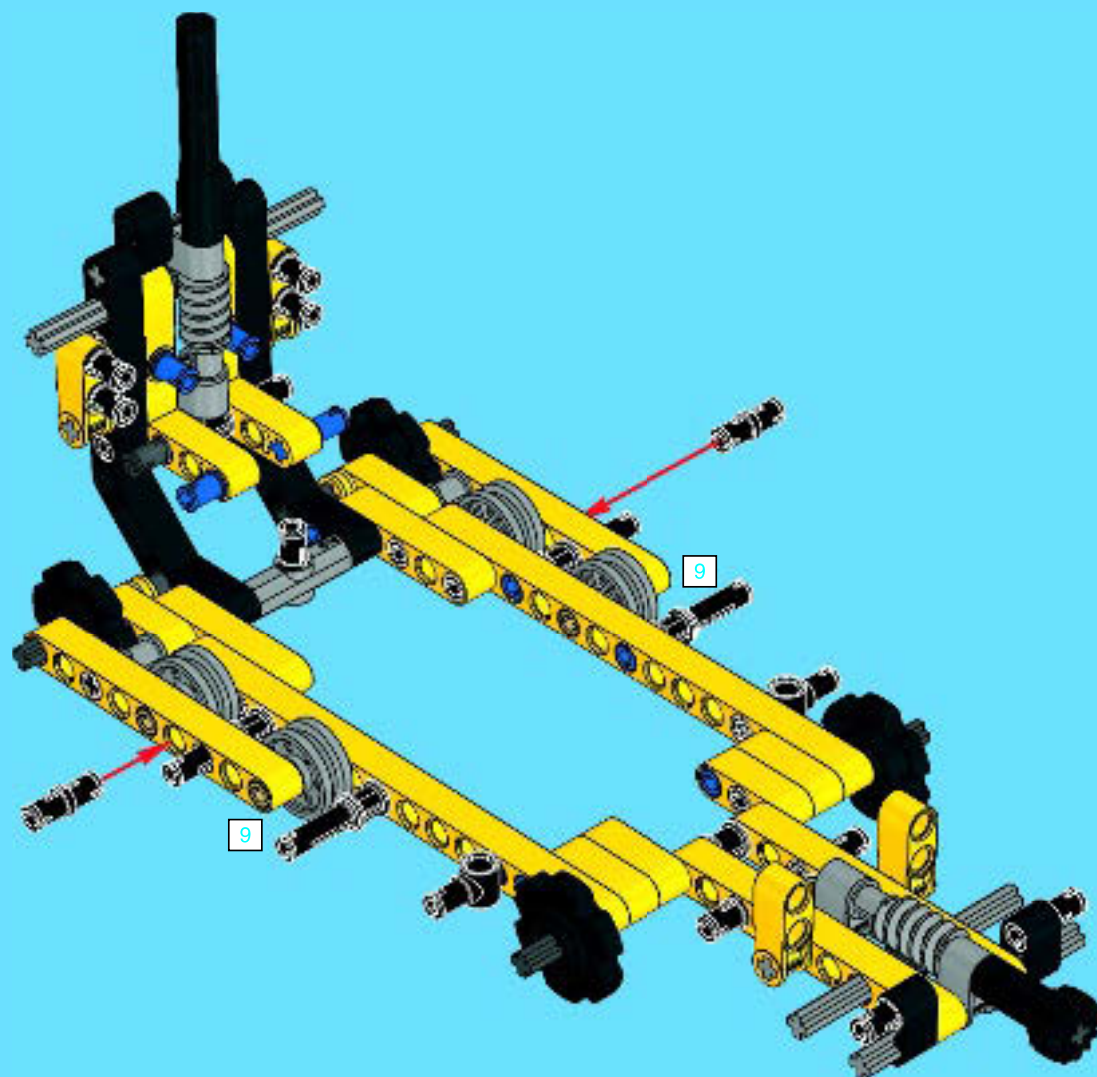 


22

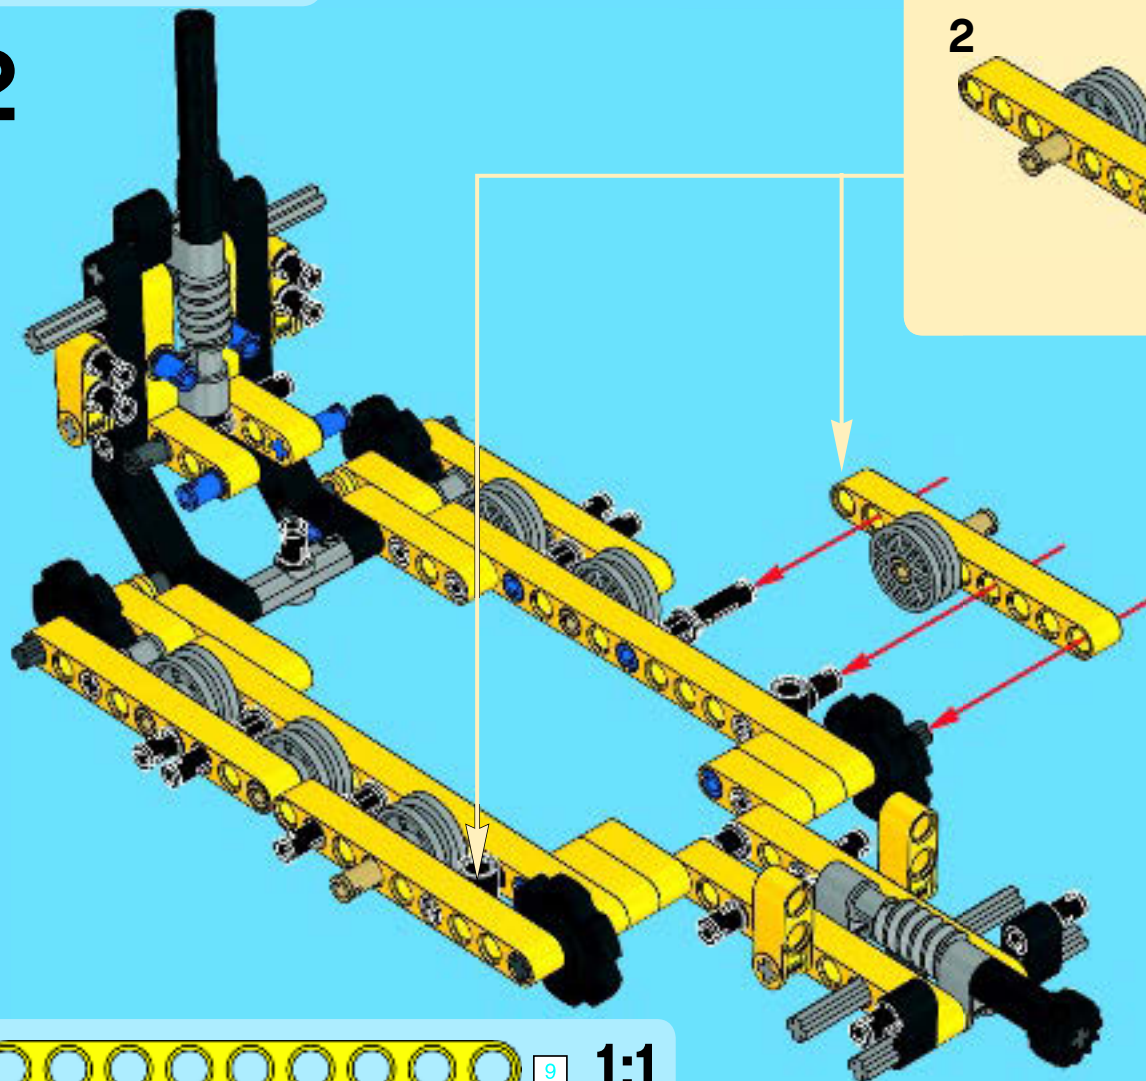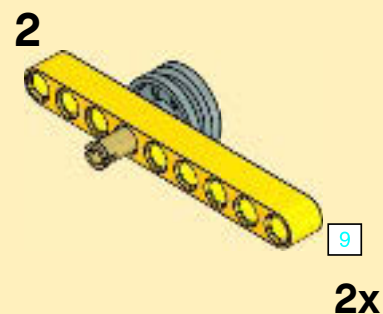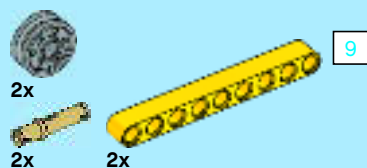   



23

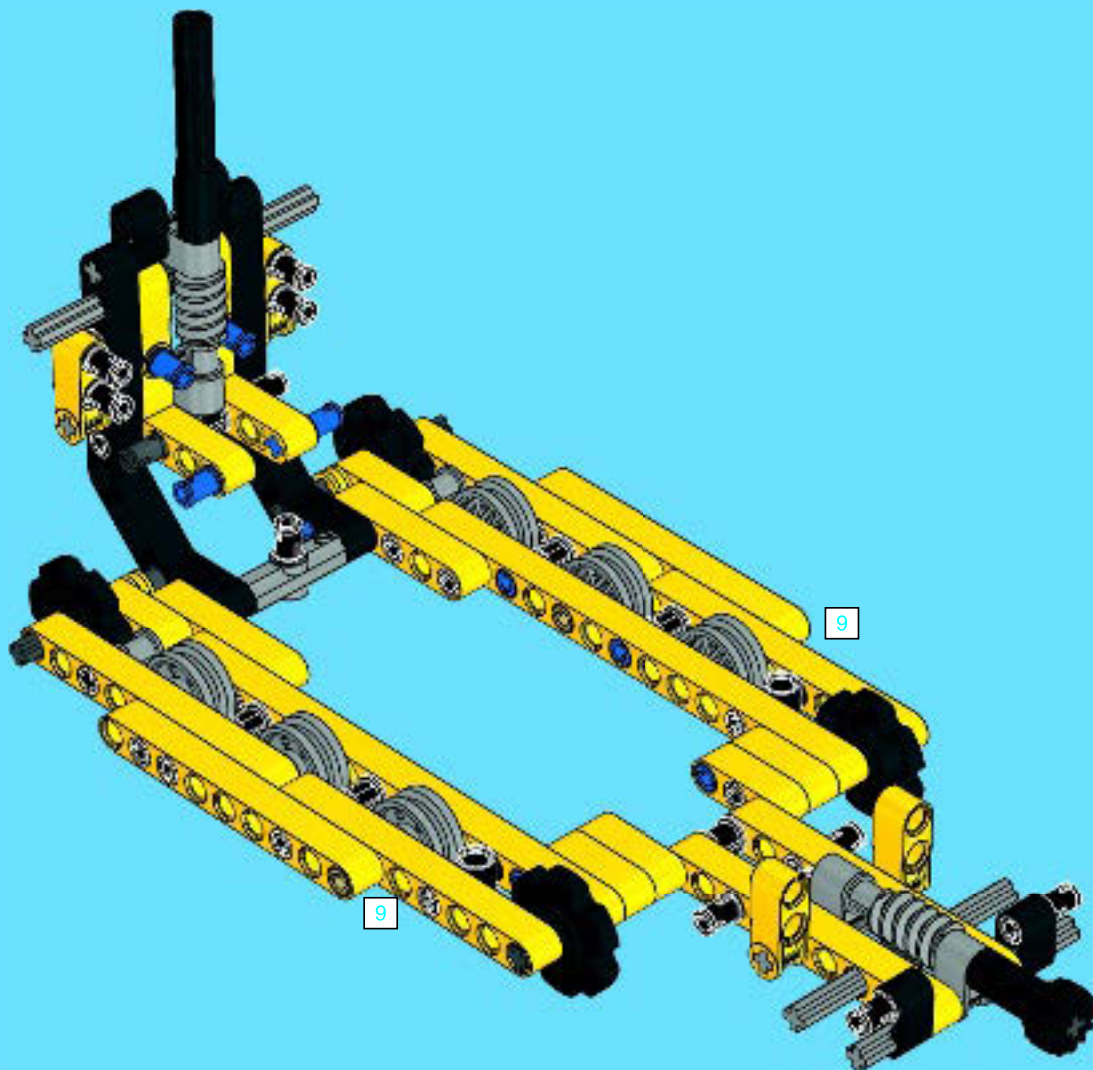 

4x

8x

4x

24

 
1

 


2







4x

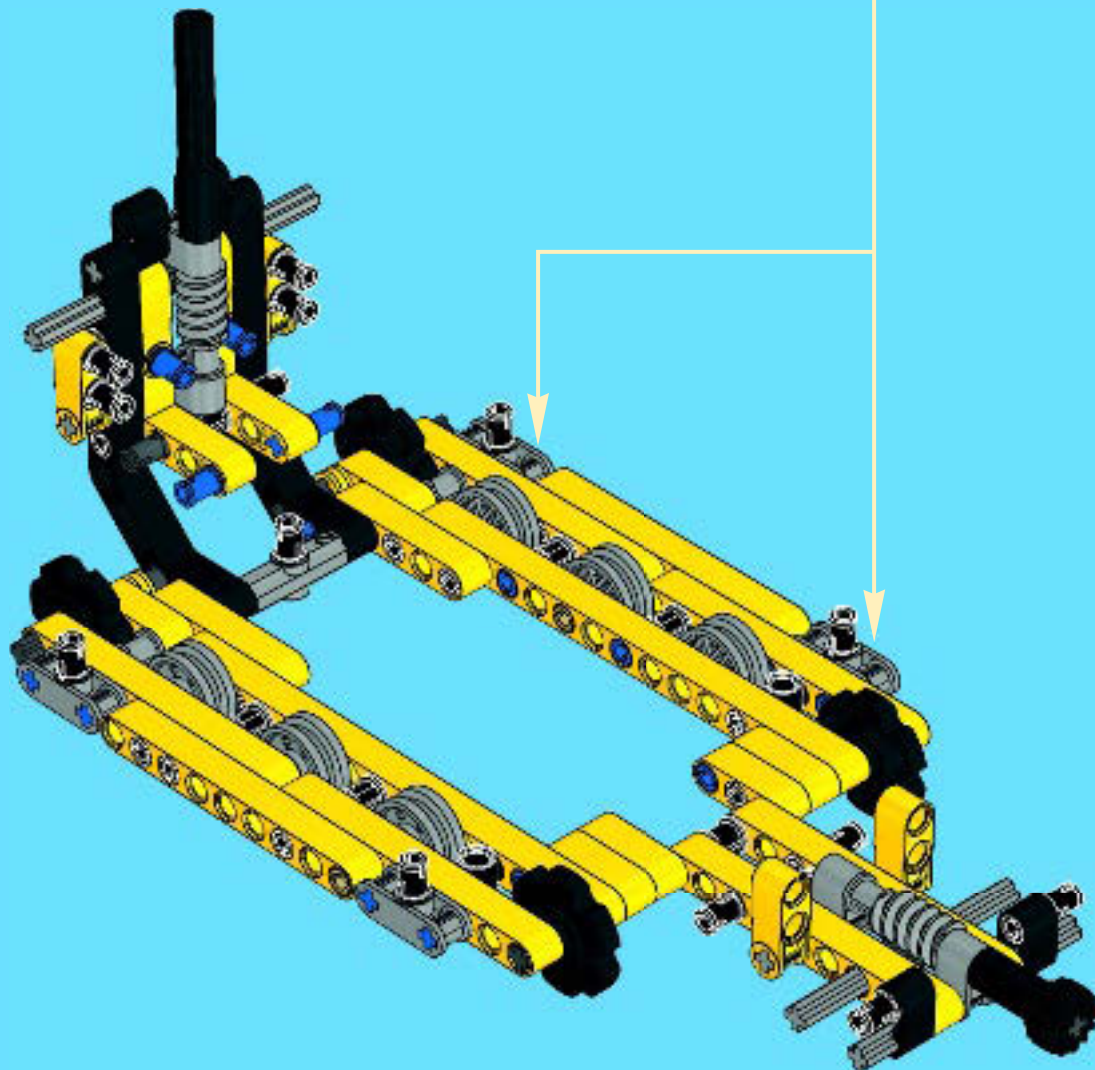

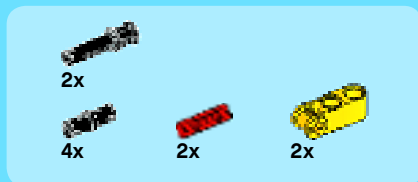


25

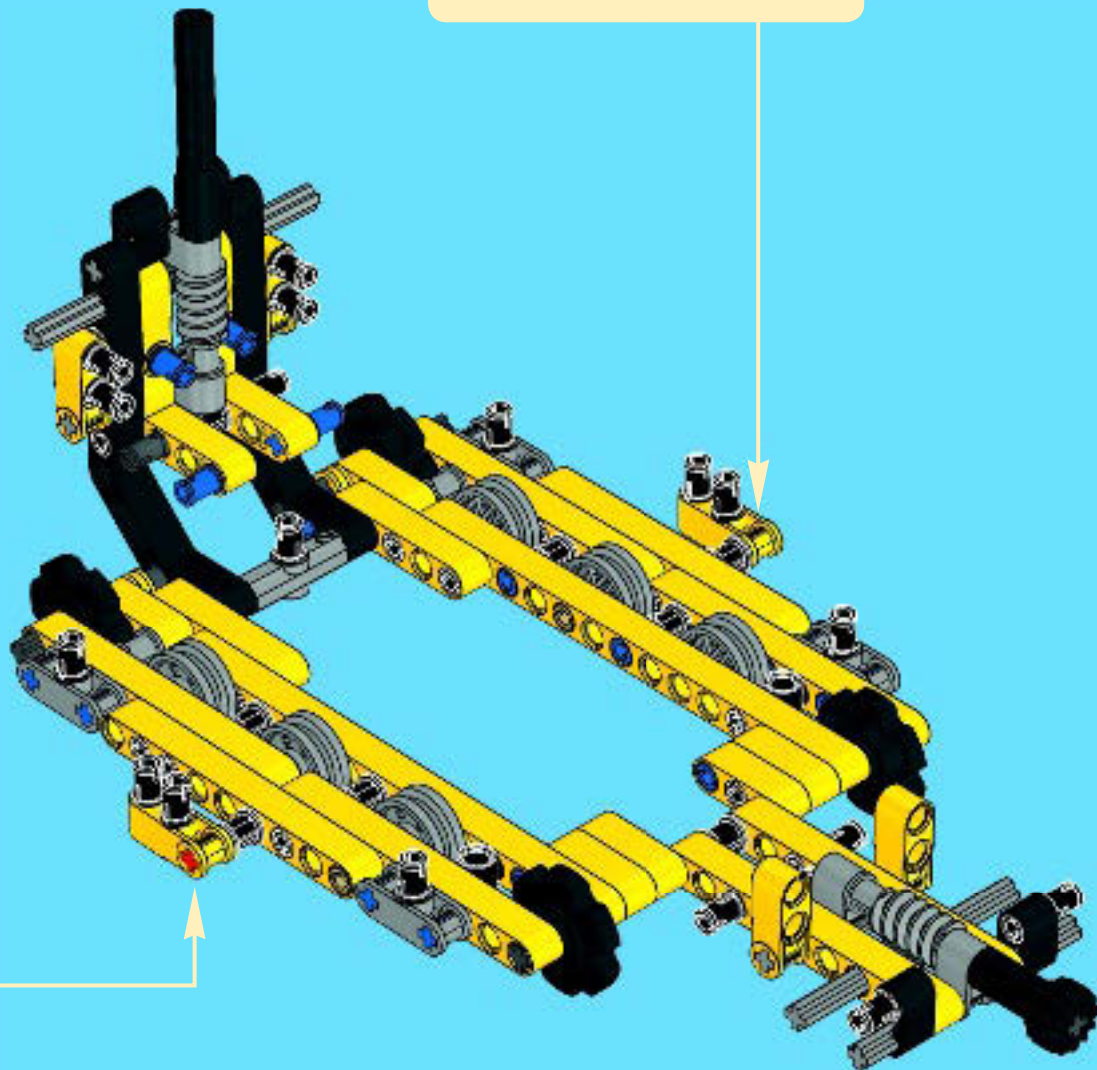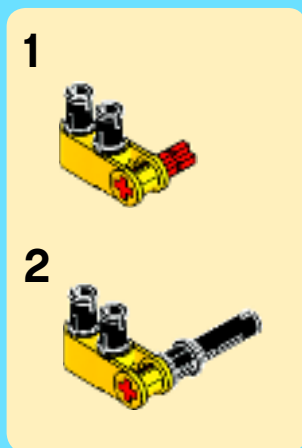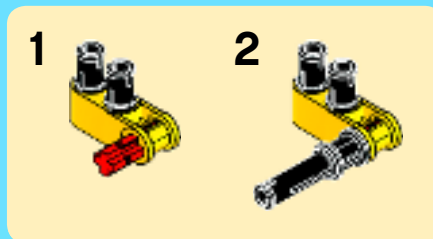   

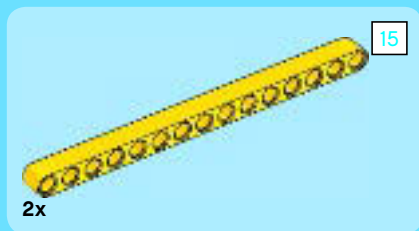 

26

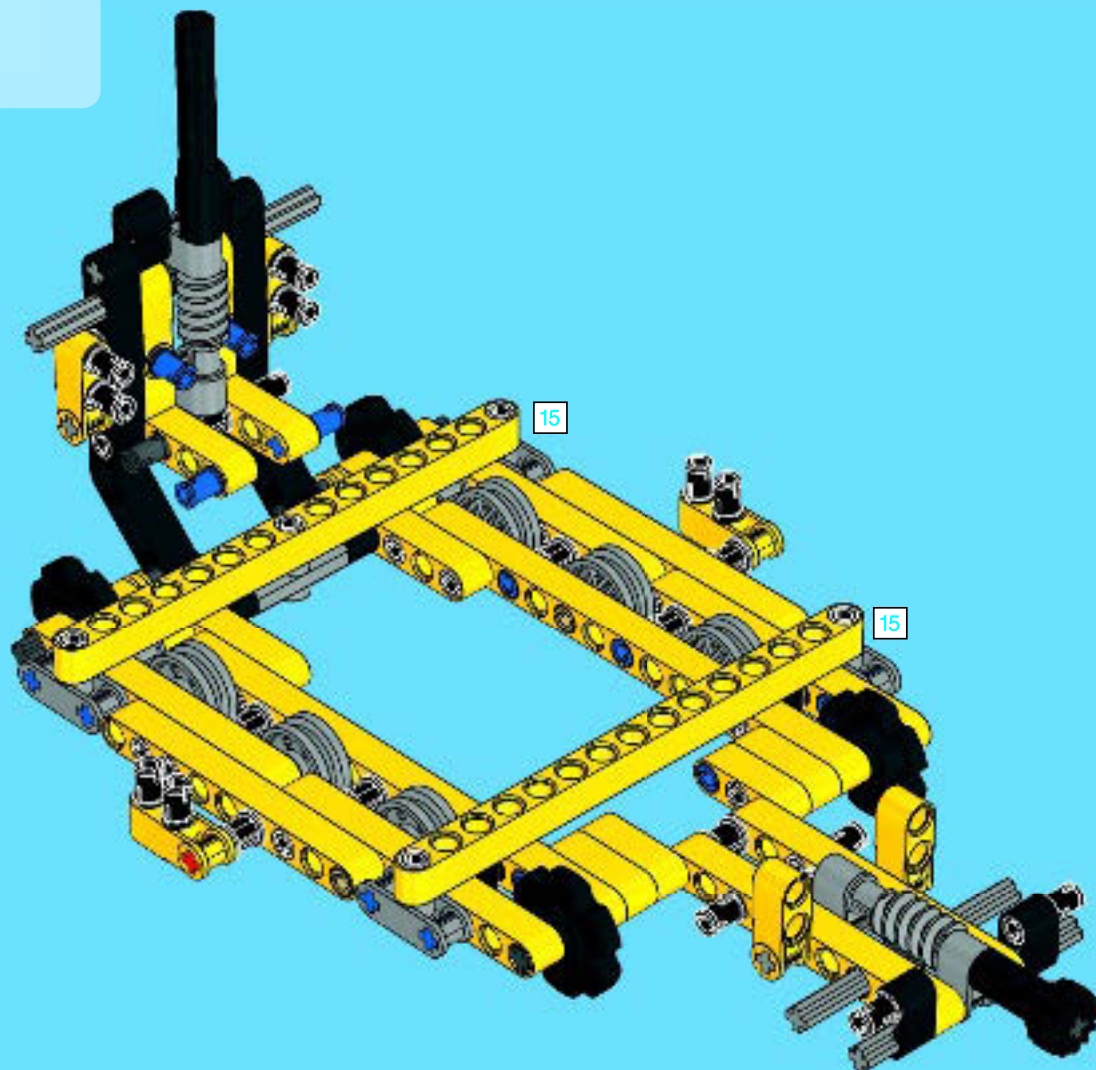 


1:1




2x

 27

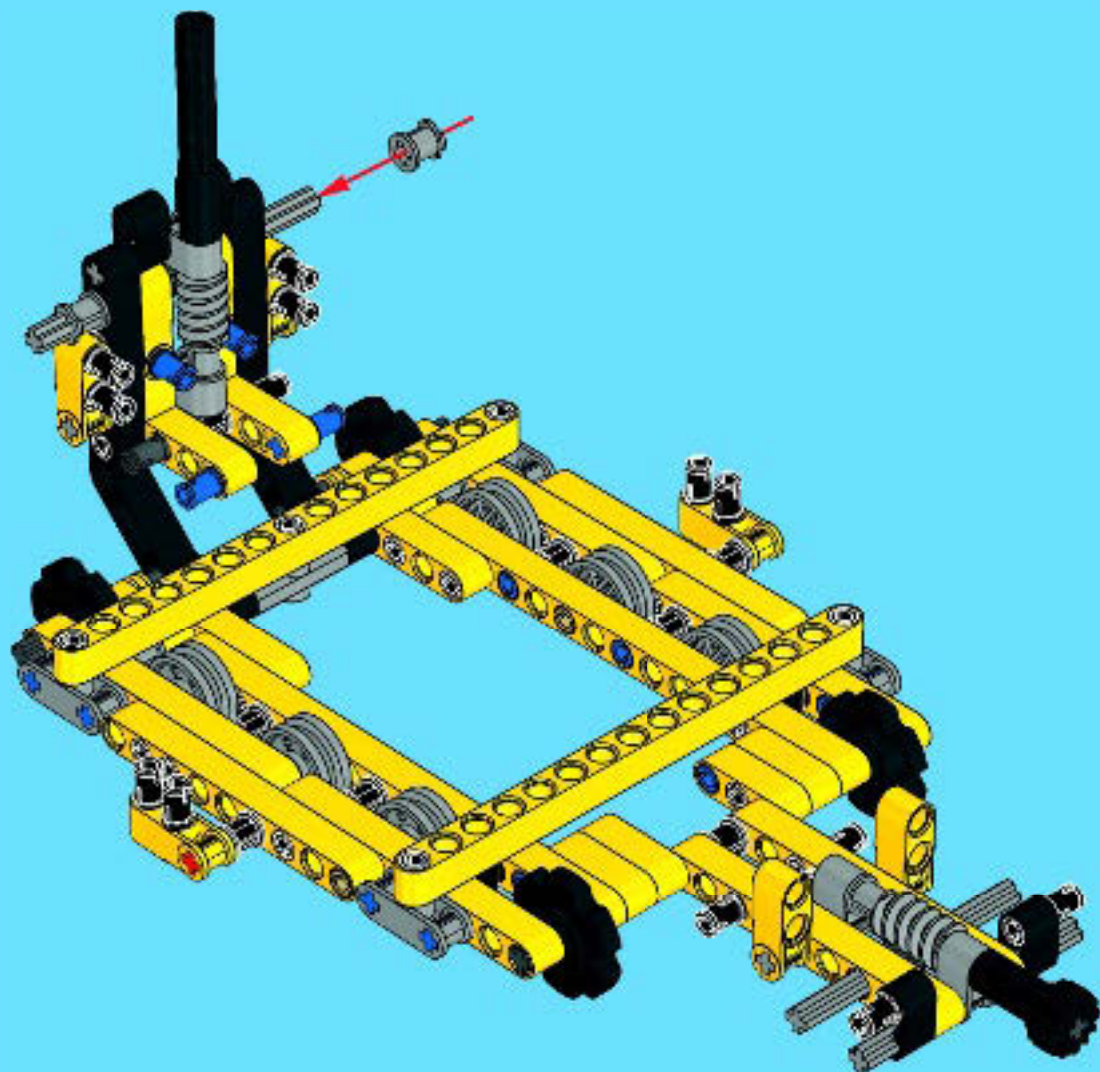





28

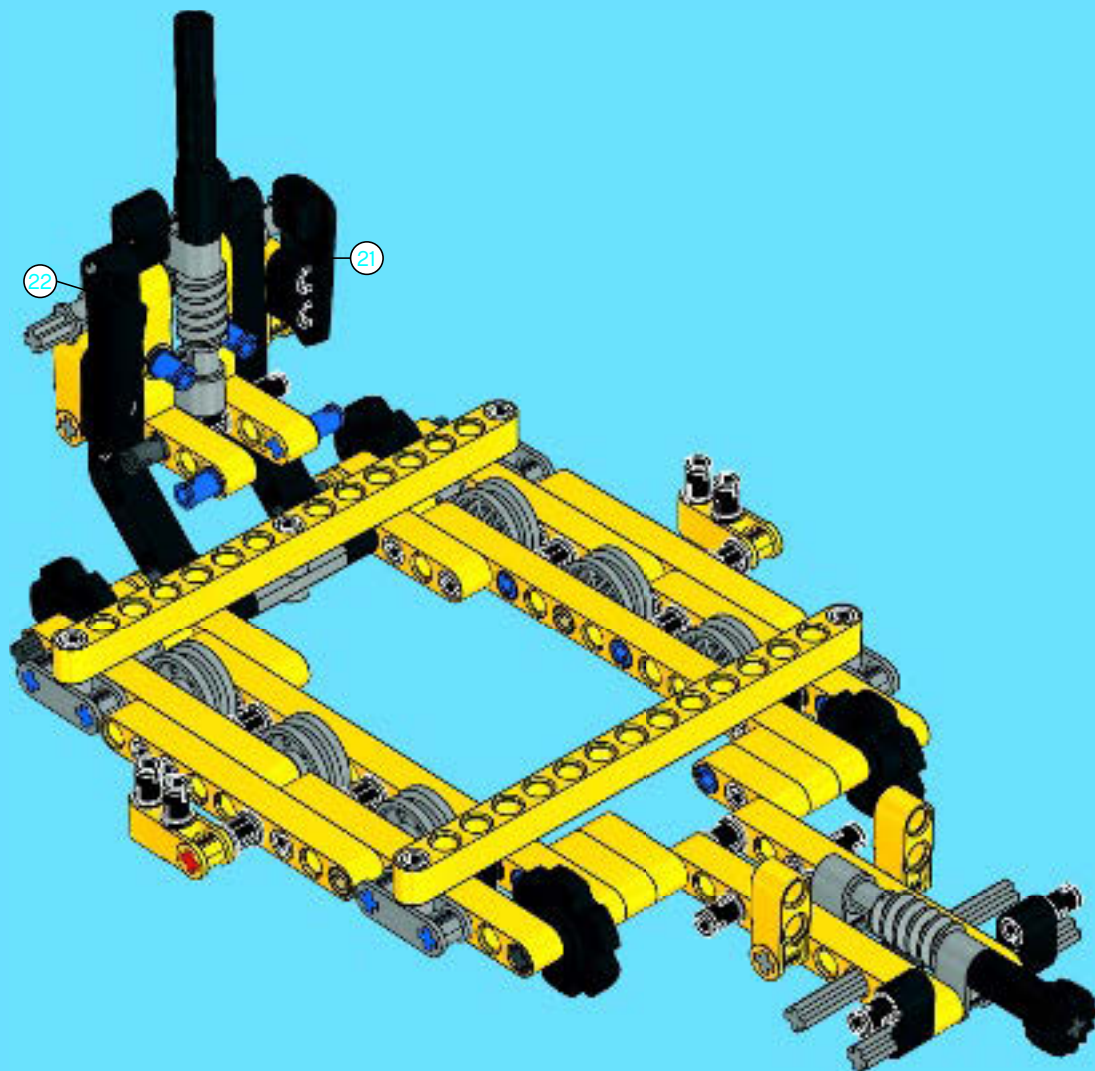 





1

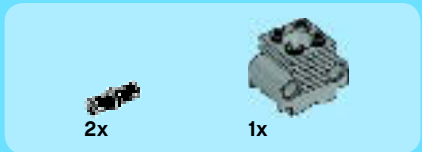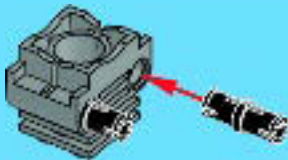  


2

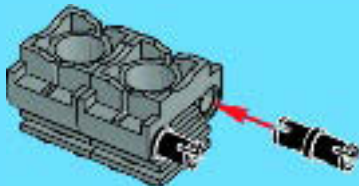 


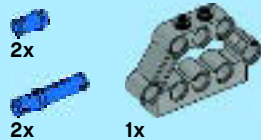 




3

 1


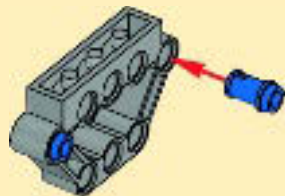


2

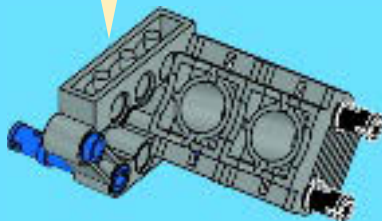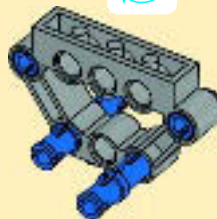  

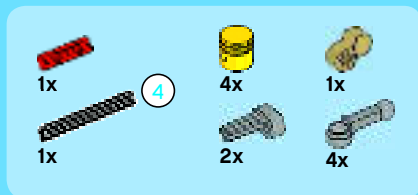  

4

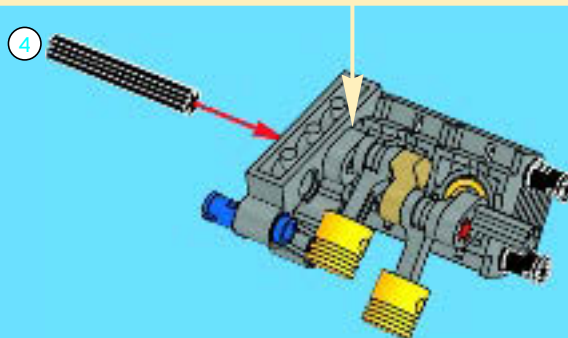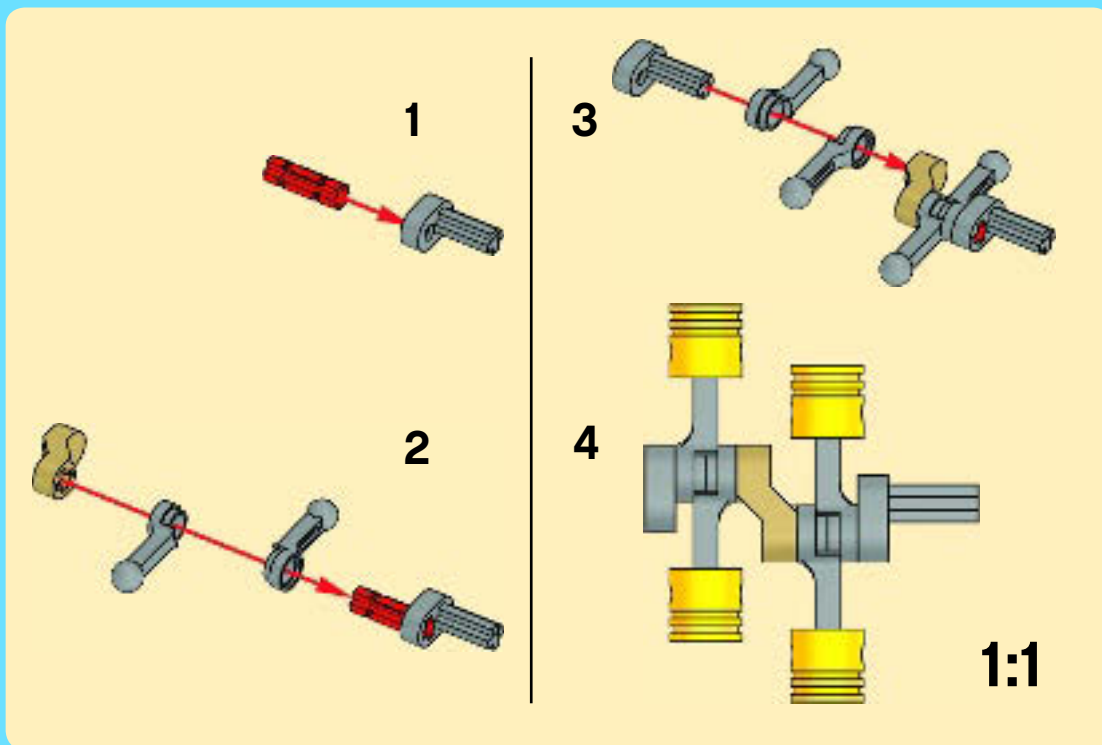  




4x





2x


5

 1


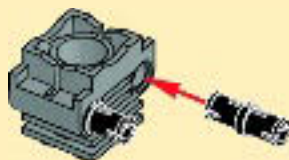



2

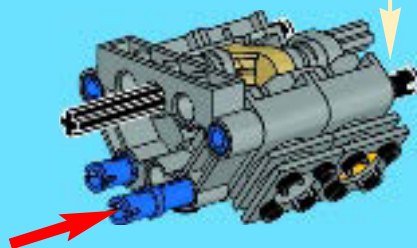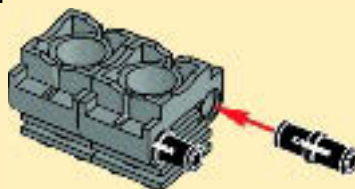  

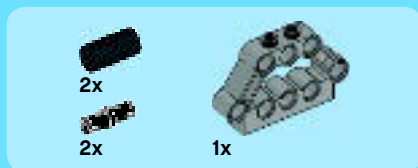 


6

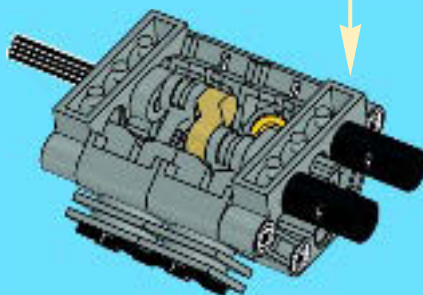 
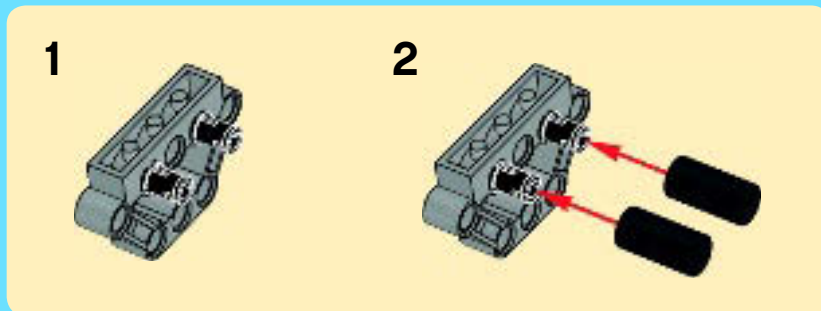 


 




1

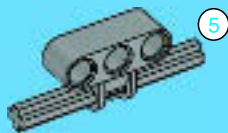 




2

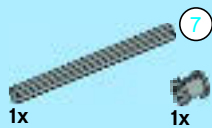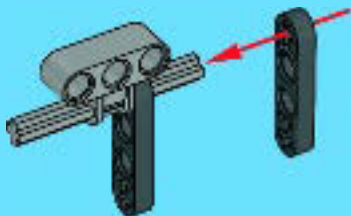  

3

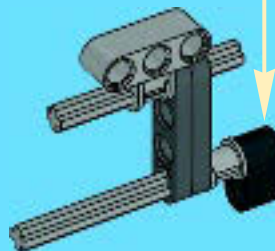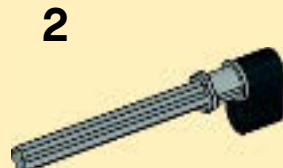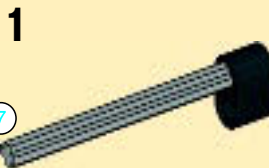   

4

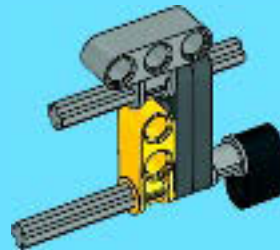   


1:1



2x

 5

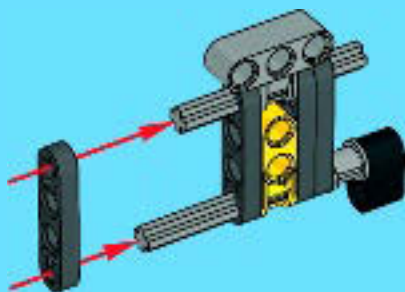


1x




1x

 6

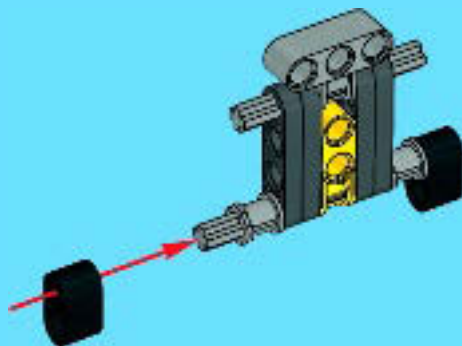

2x

 7

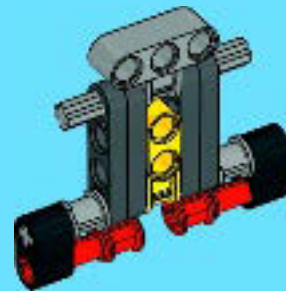

1x

5.5

 


1x




1x

8

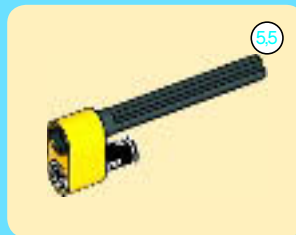

 5.5

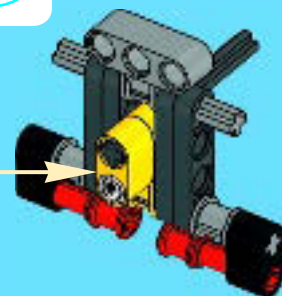


5.5

1:1



4x

 9

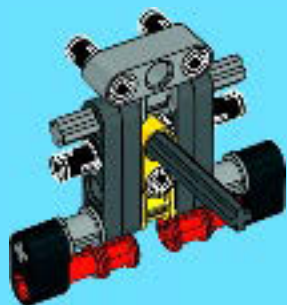



1x



1x


11

  10

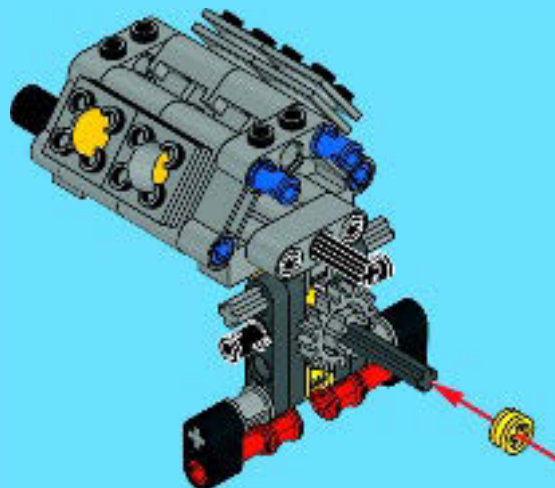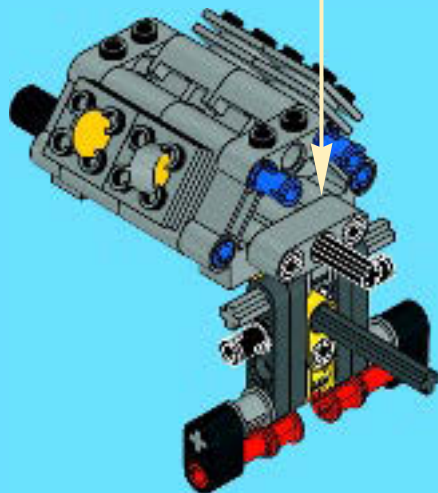




12

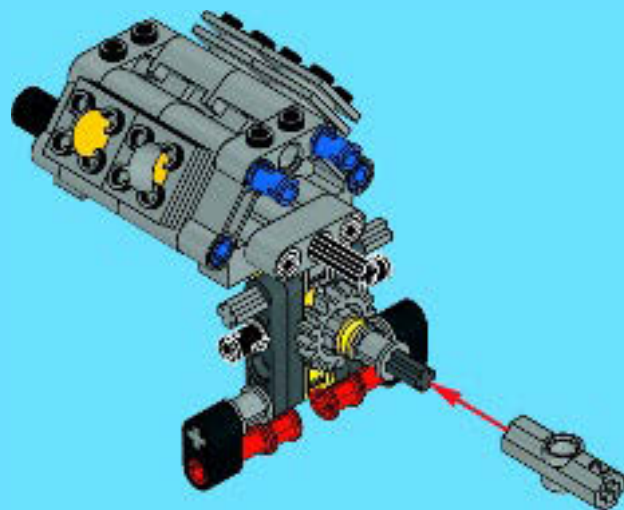 

13

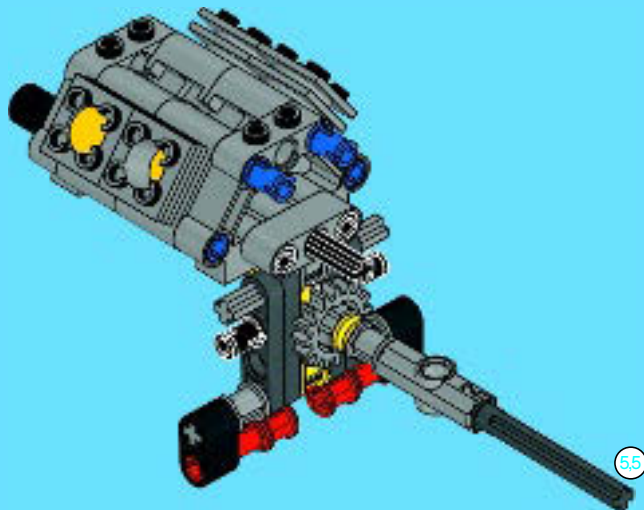 


1:1



1x

 14

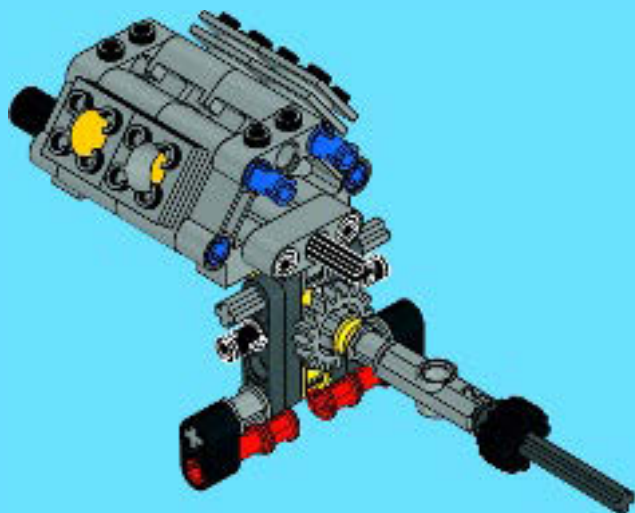

2x

 
15






1x

16

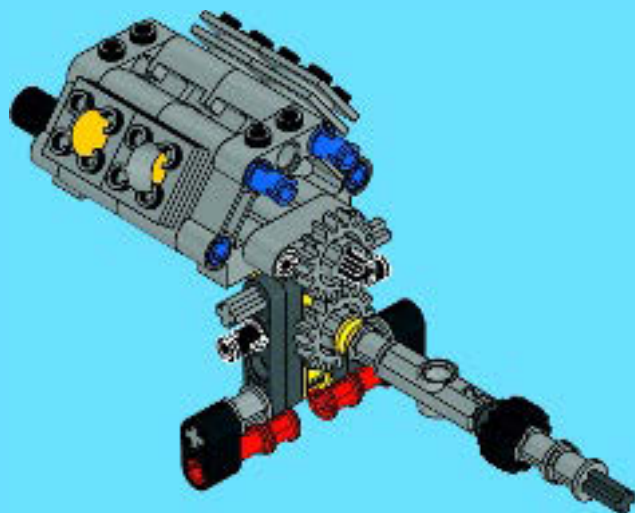


2x

 
17

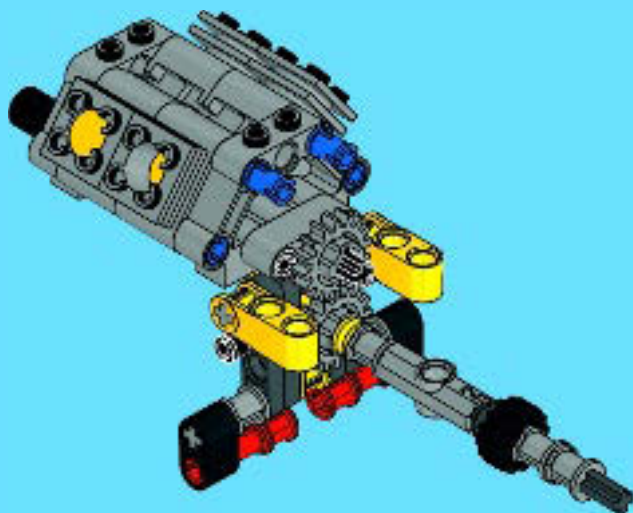

29

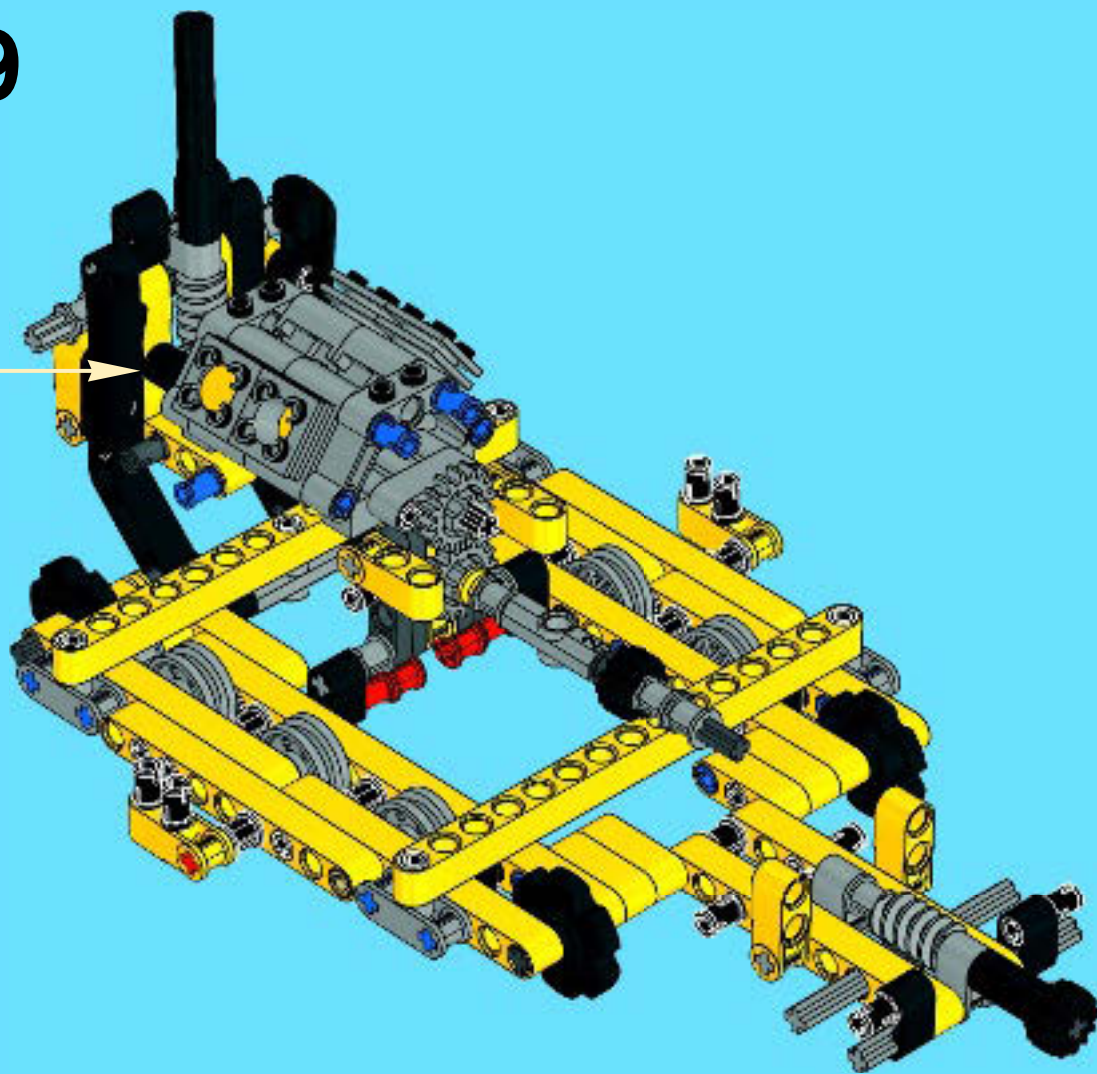 


30

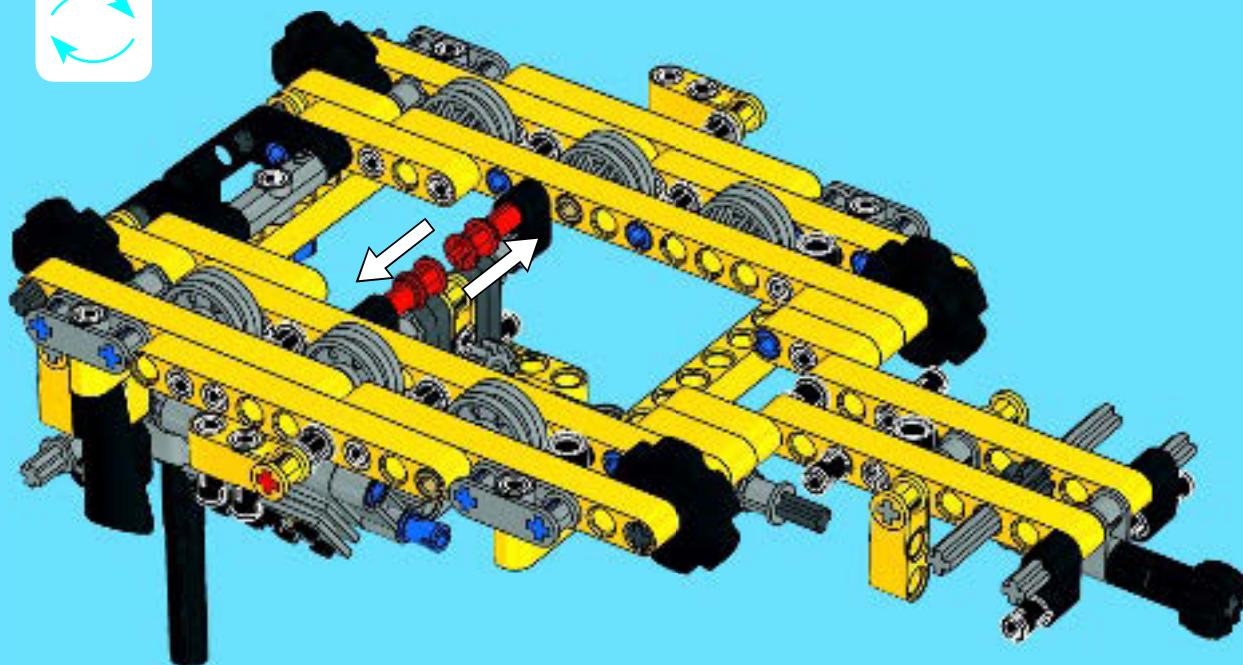 



31

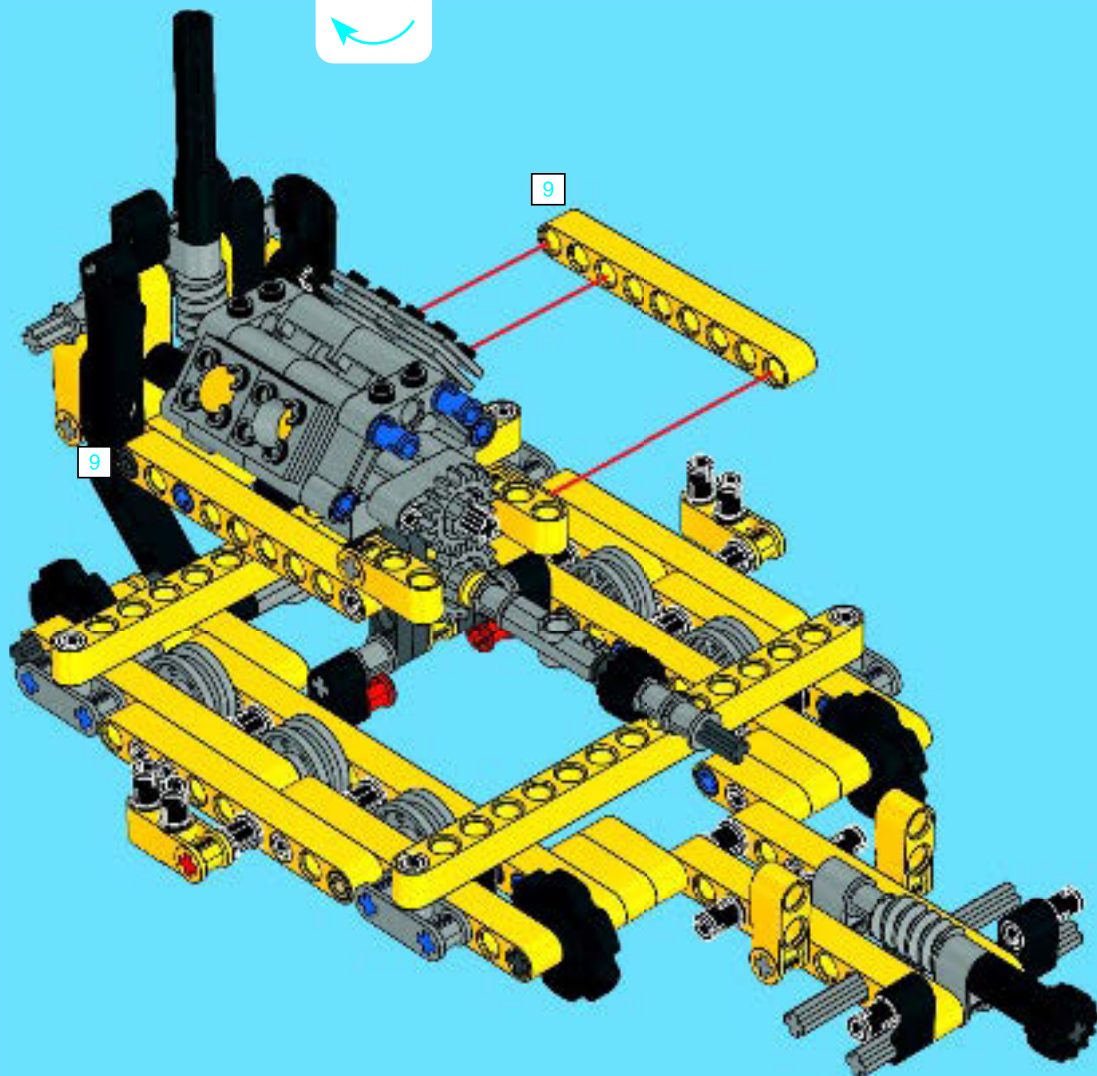 




4x

1x

 1


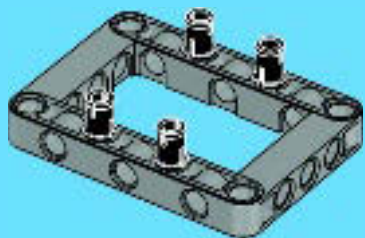



1x





1x

   2

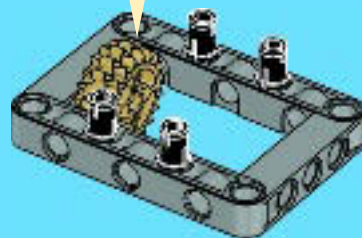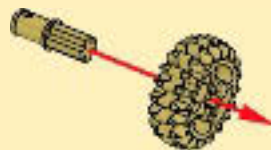

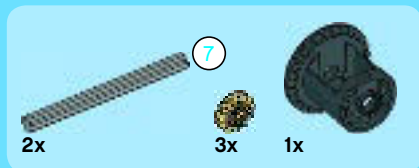


3

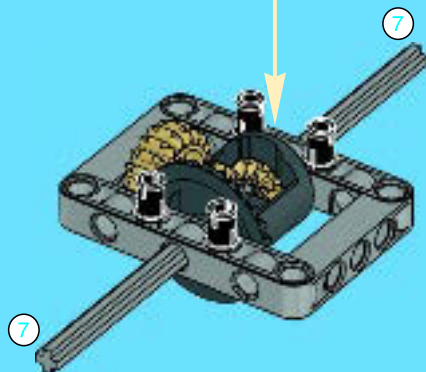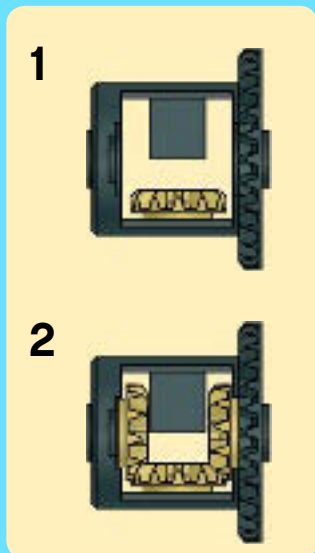  

1:1



 
4

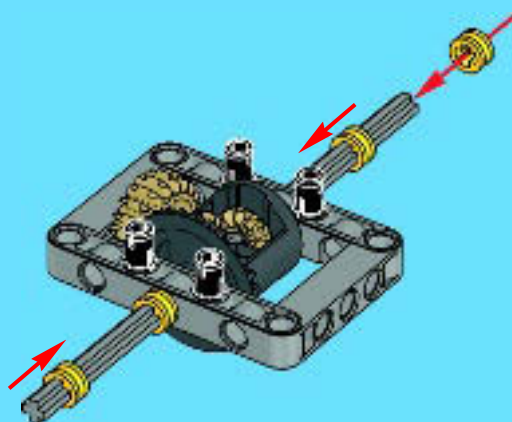





2x

 5

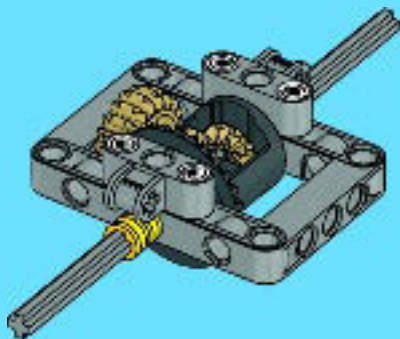

2x

  6

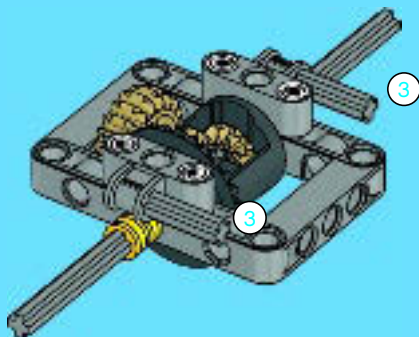

3

1:1



1x

 


1x






1x

7

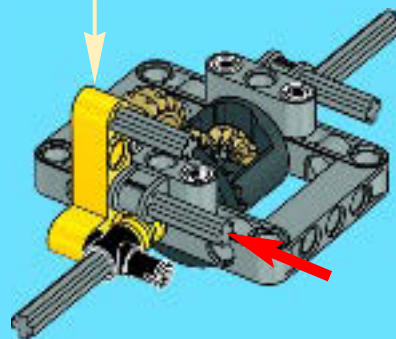




8

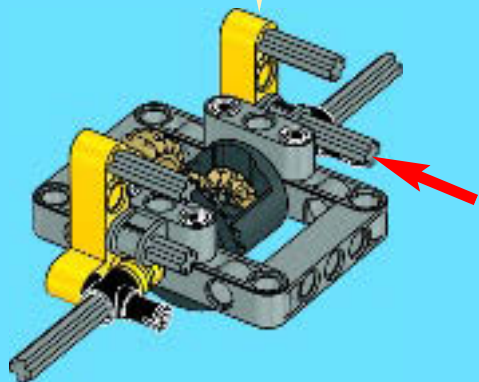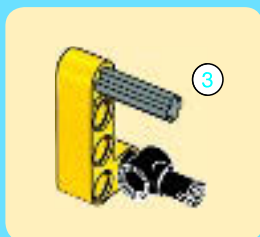   


3

 
1:1

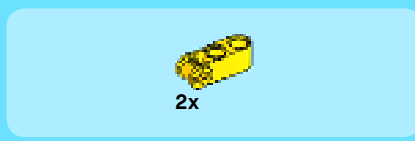

9

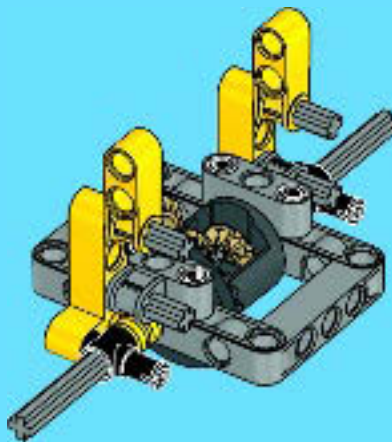 


10

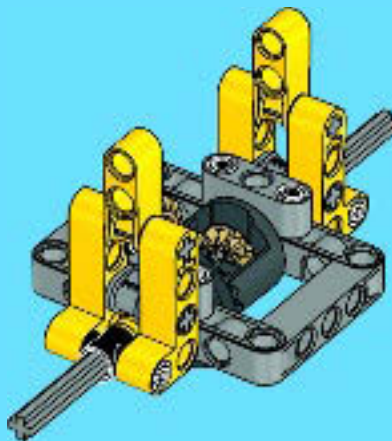 





11

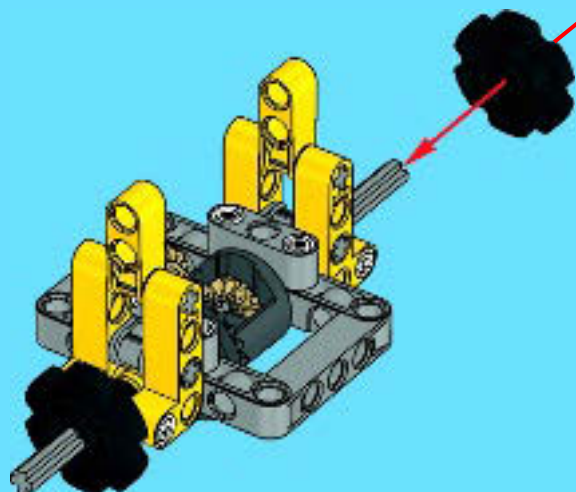 

12

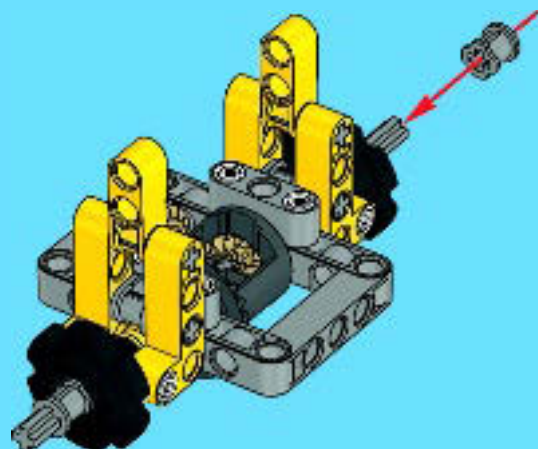 


13

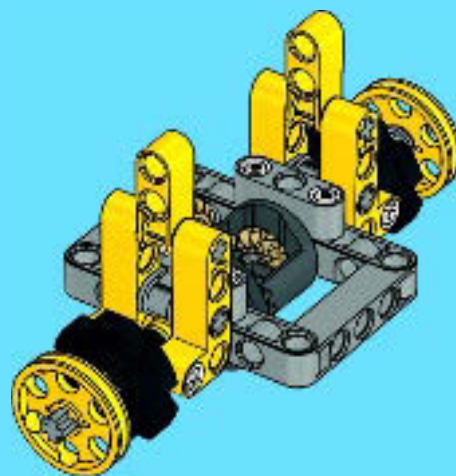 




2x

 14

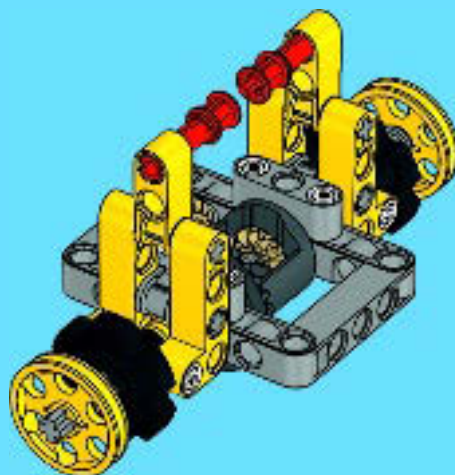


4x

 
15

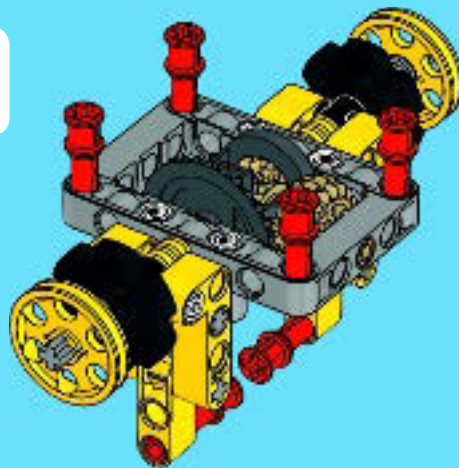


32

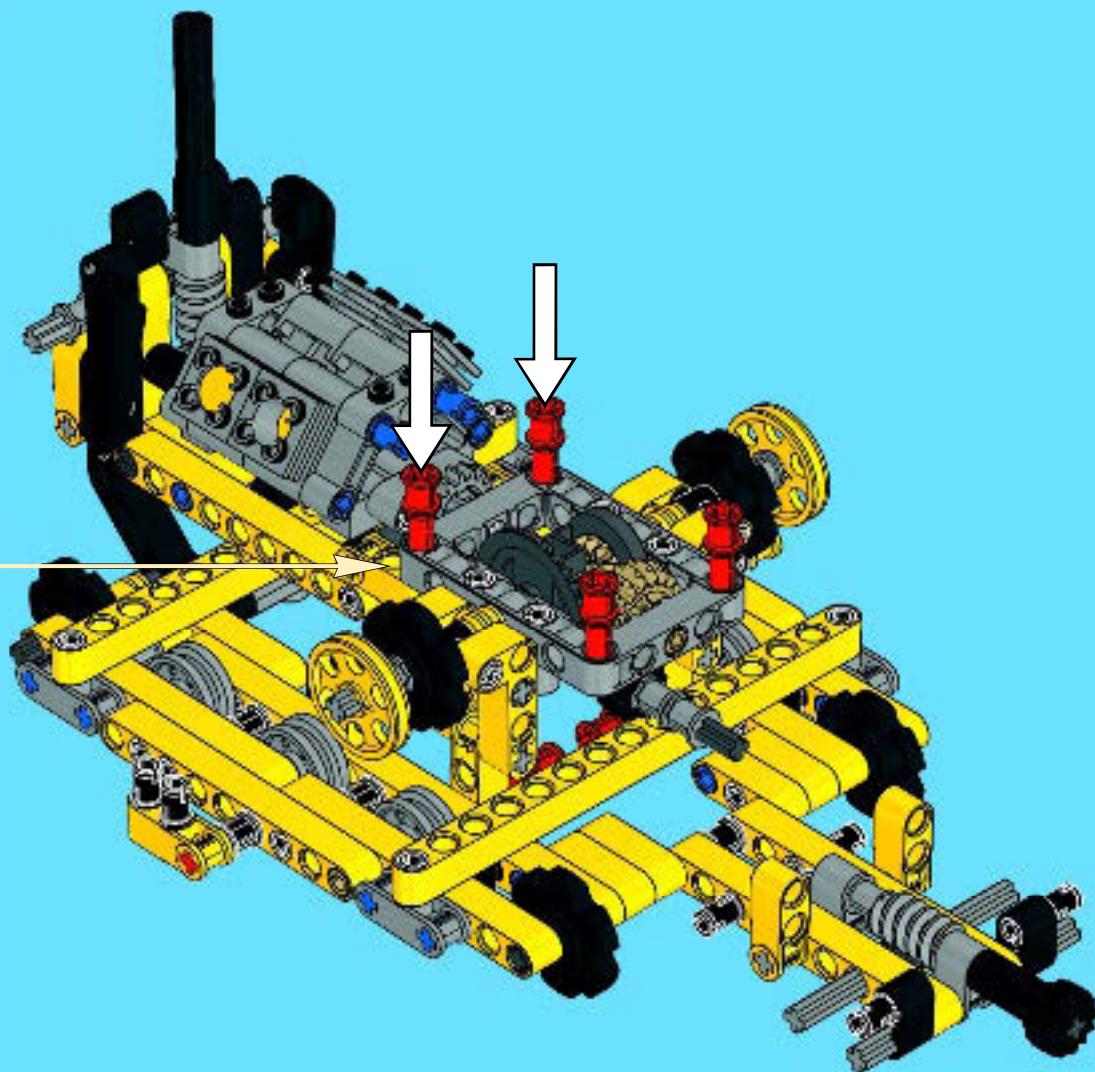 

33


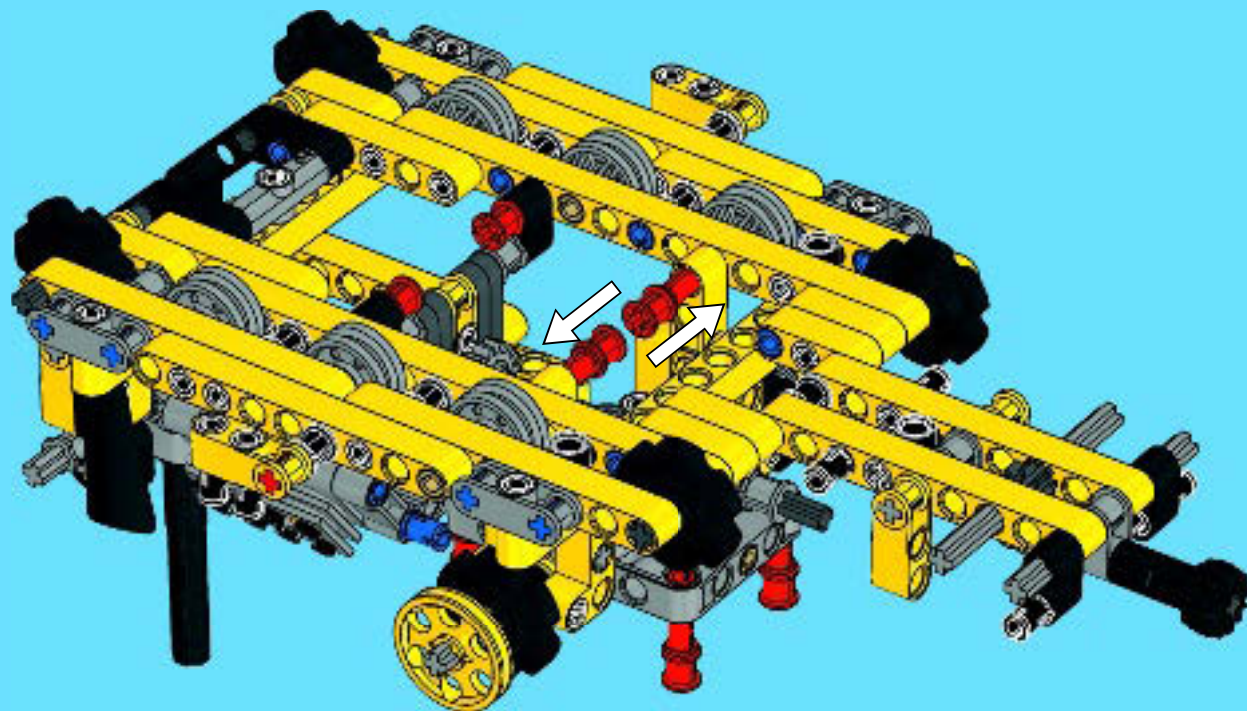 


34

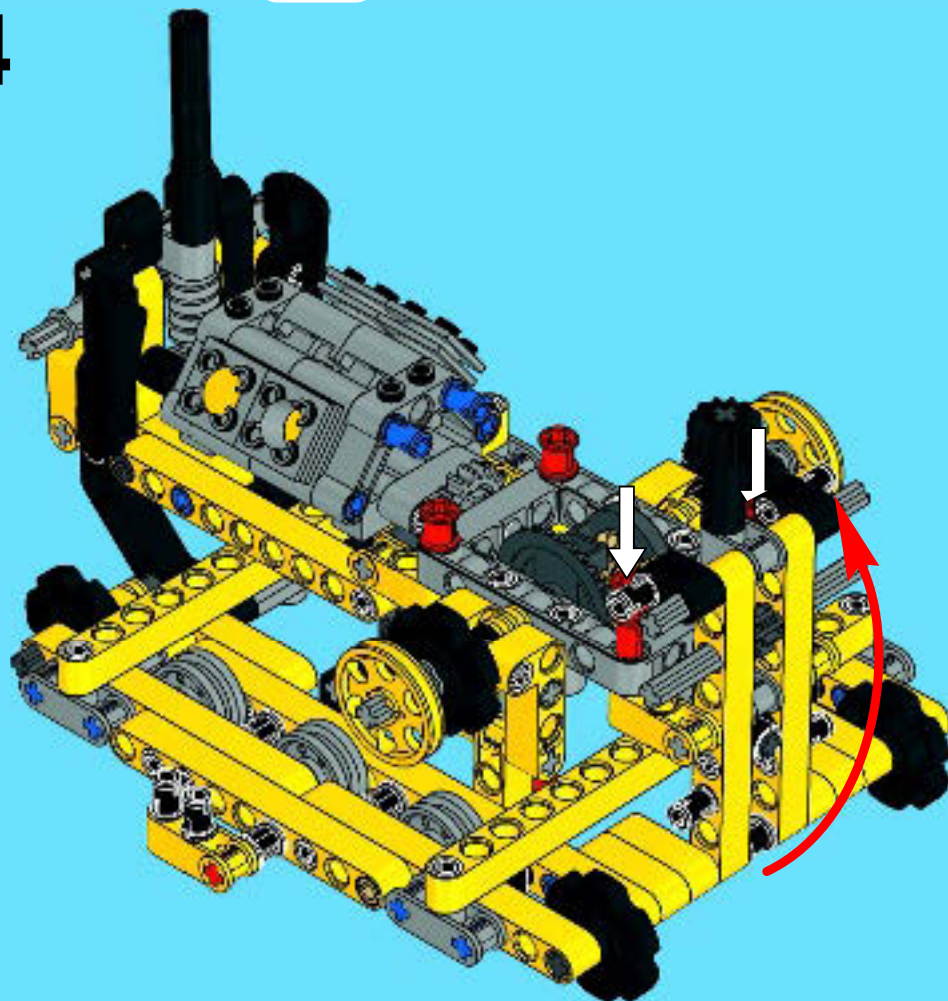 



35

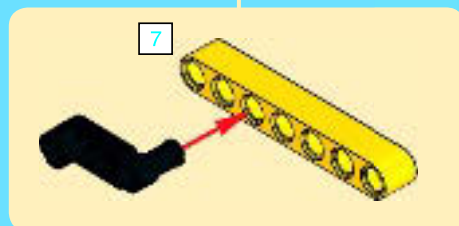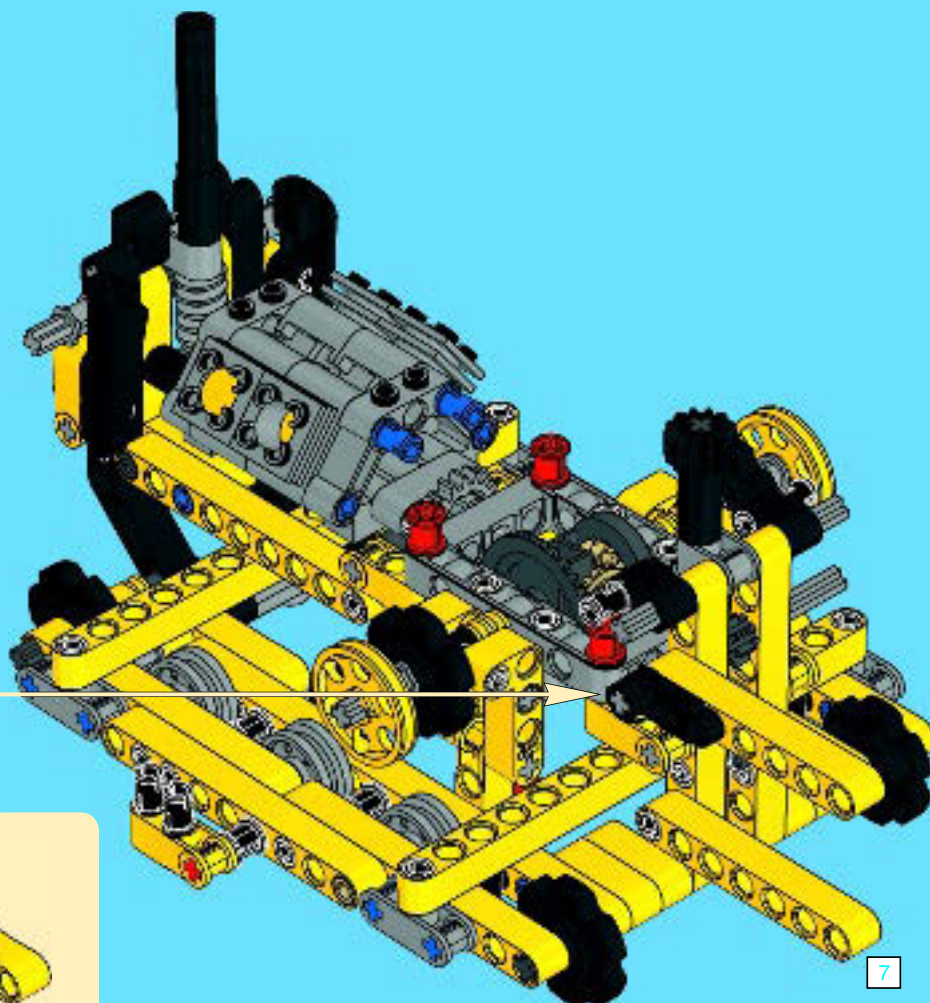  




1




 2

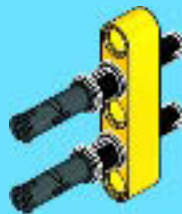


5

 1:1




1x

 3

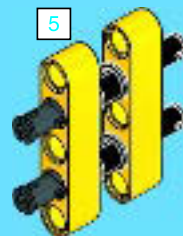


2x

 4

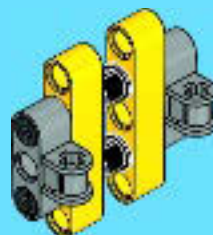


4x

 5



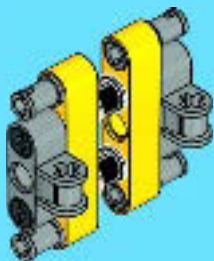



36

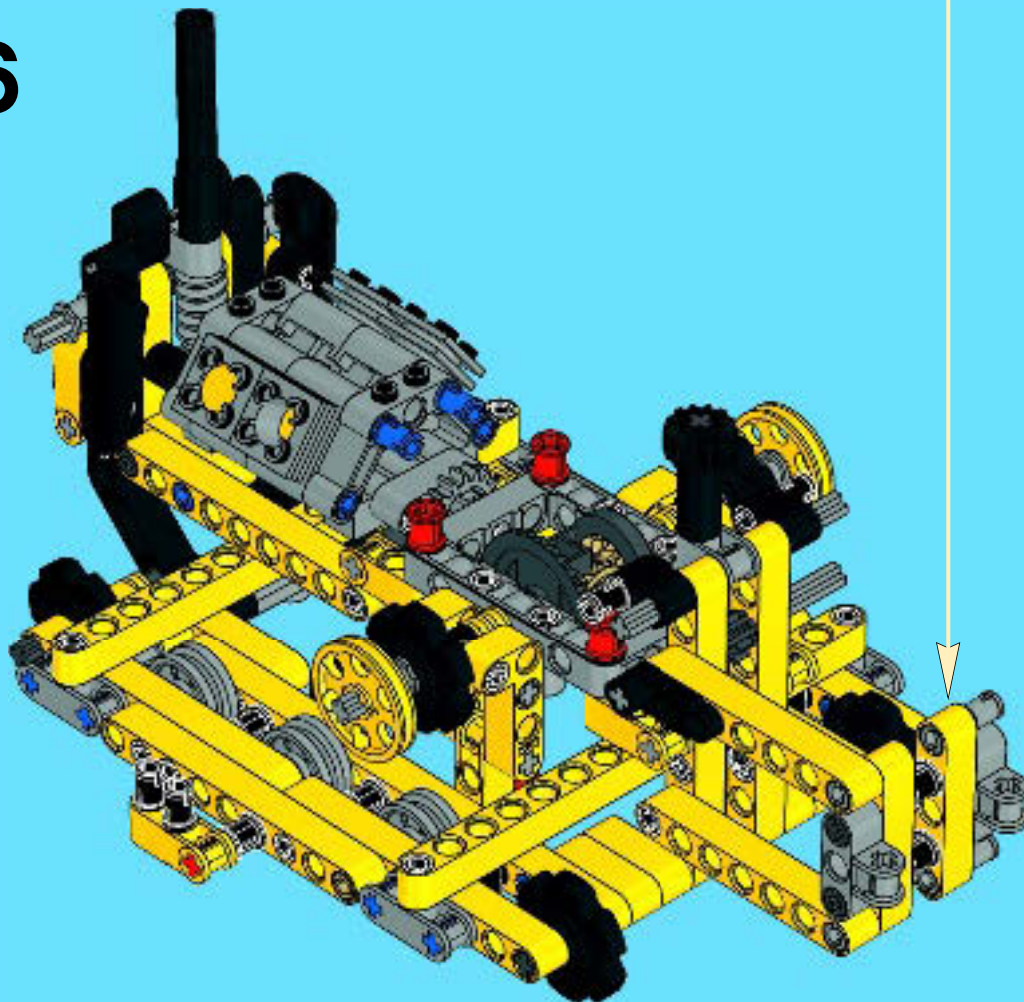 



37

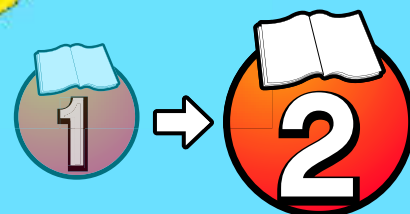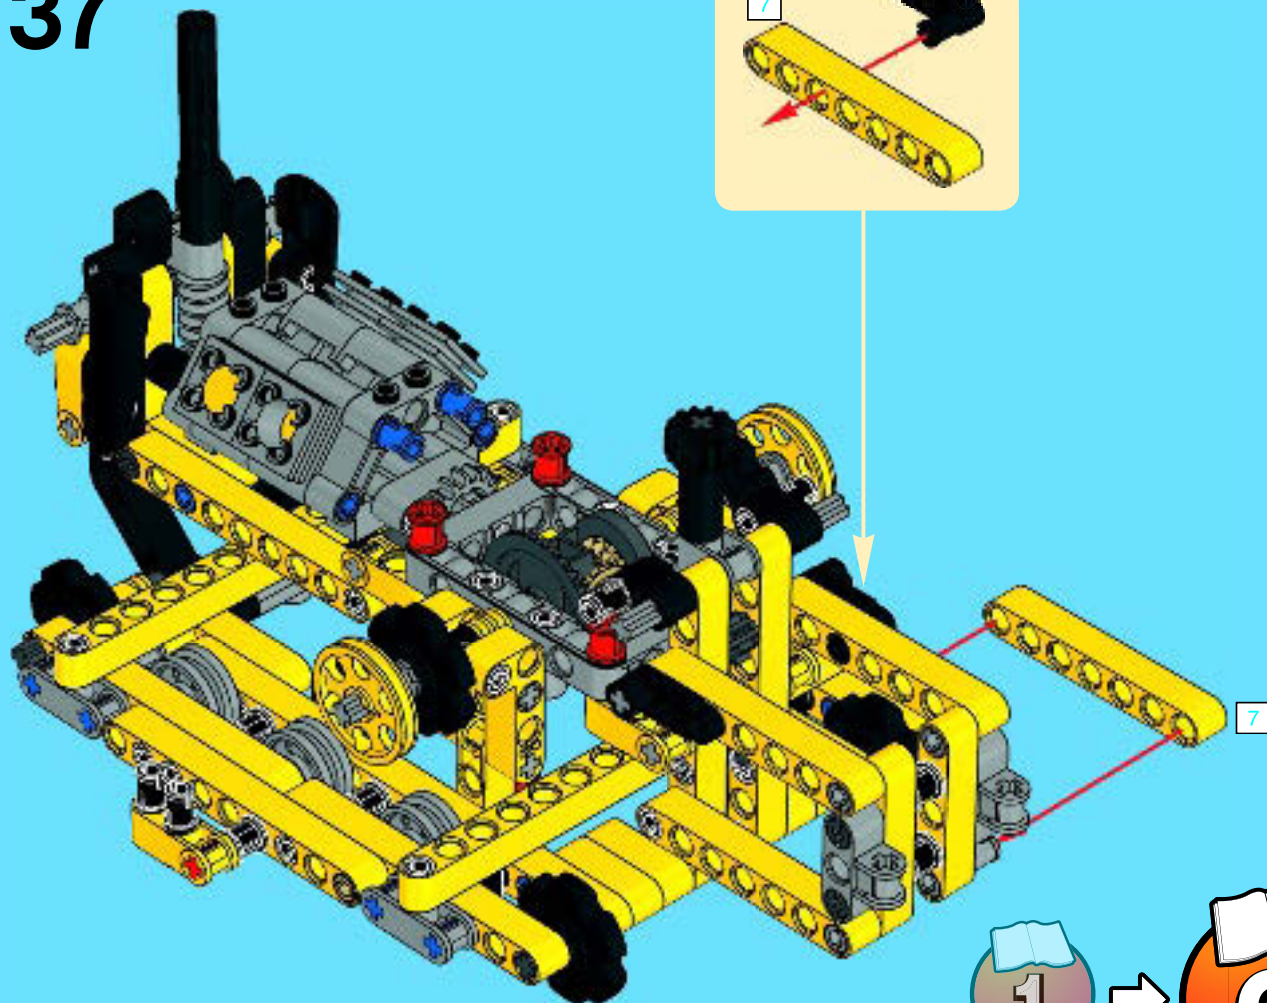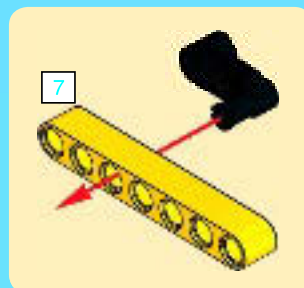   

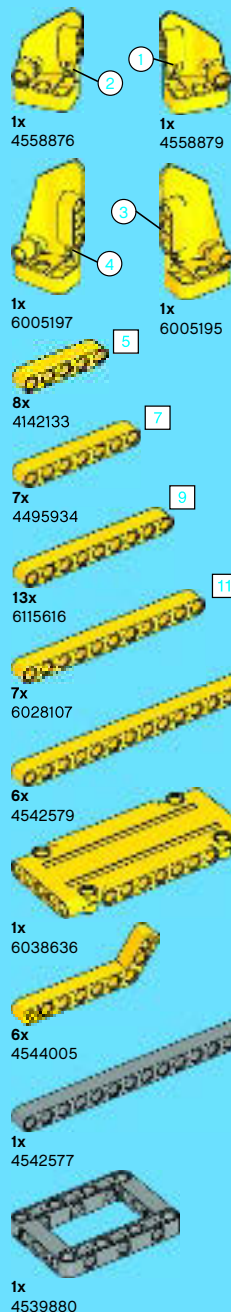 

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :

1-800-422-5346 :

