

Инструкция ЛЕГО (Lego) 31028



# CREATOR

 
31028



[LEGO.com/creator](http://LEGO.com/creator)




1

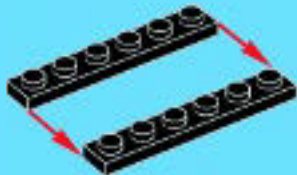


2

 
2

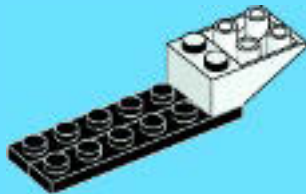

3

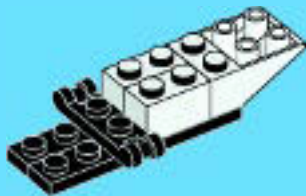 

4

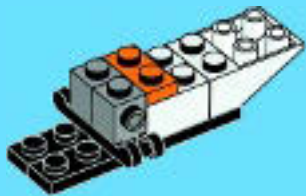 

1

 


2



2x


5

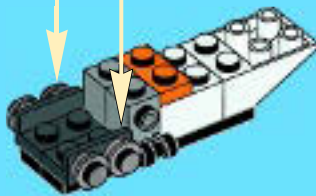

6




 7

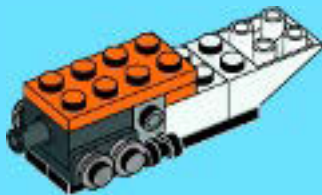



1

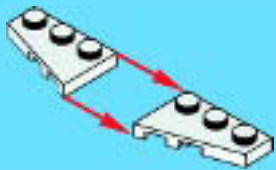 


2




3



 
4

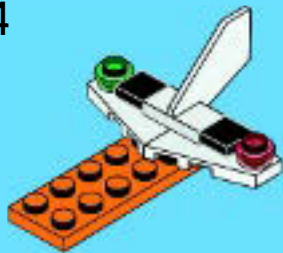


8

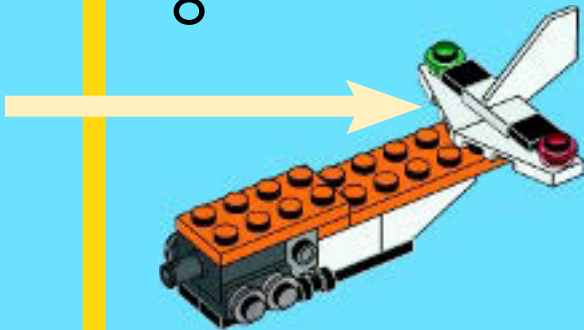 

9

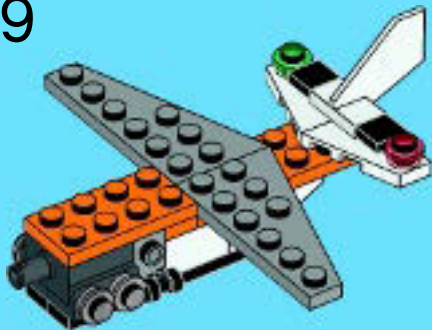 

10

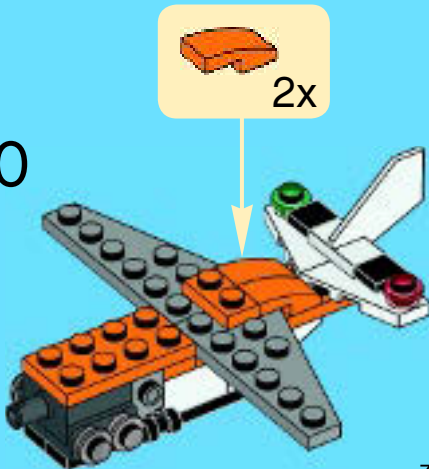 


11






 12

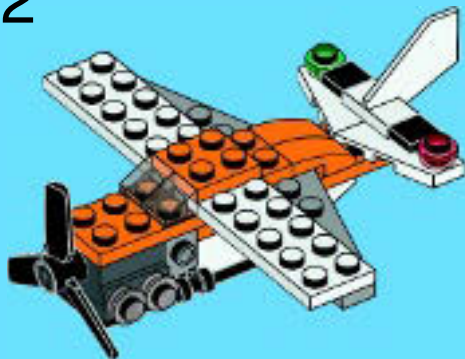


13

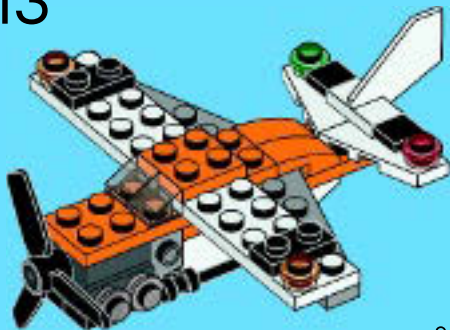 




1

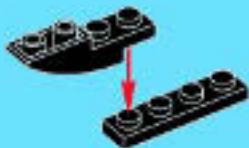 

2

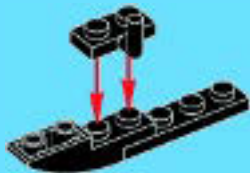 


3



4



 1

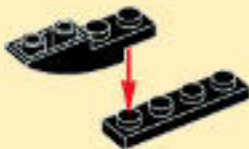

2



3



5



6

 


14







1

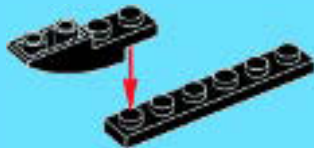

2

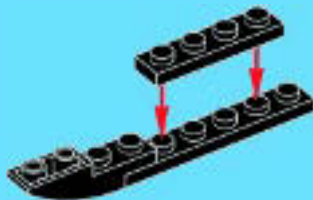 


3

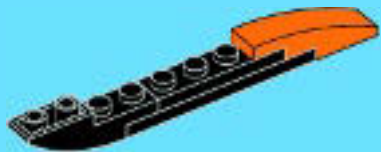 


4



 1

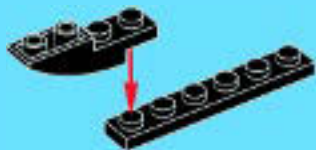


2

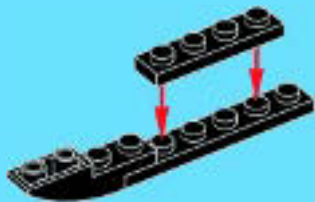 



3

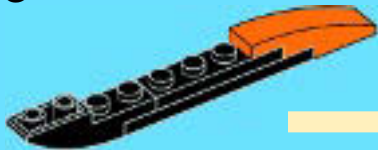 

5



1



2



6





1



2



3



4



5



6



7



 
1



2



3

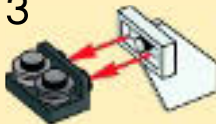


8





 
1

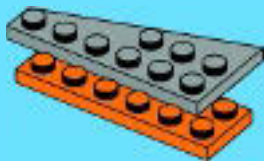

2



 3

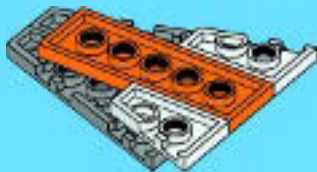


4



5



 9

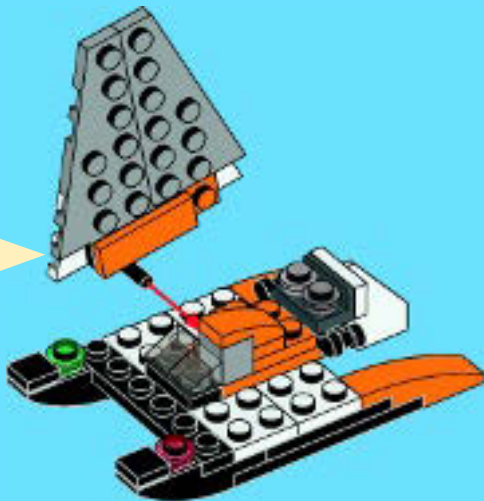





1



 
2



3




4

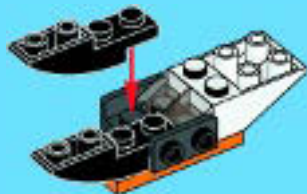

5



 6

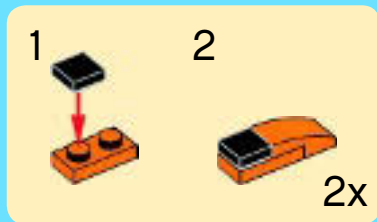



1



 
2



3



4

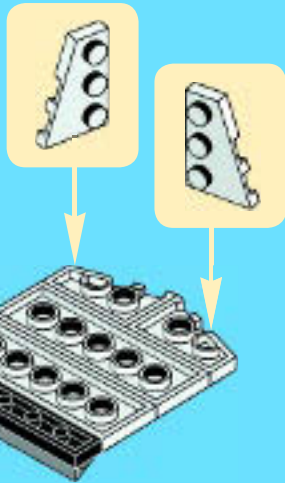


5



7



 1

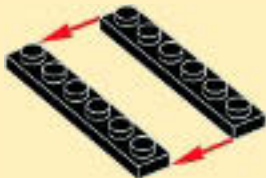

2



 
8



9



10

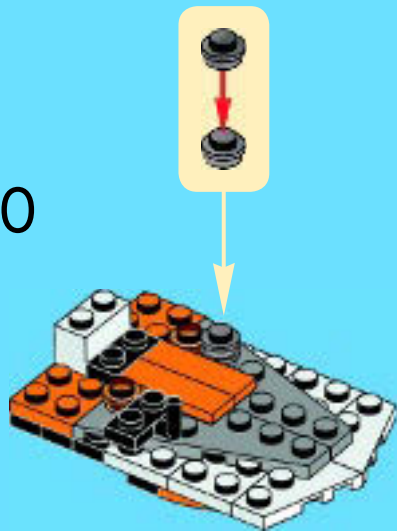





11



 
12

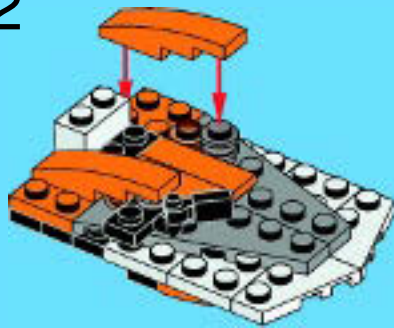


13

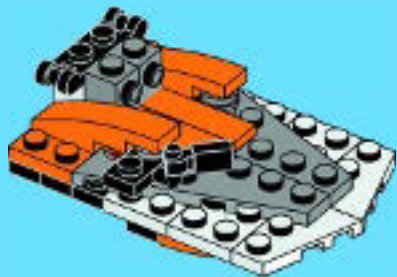 

14

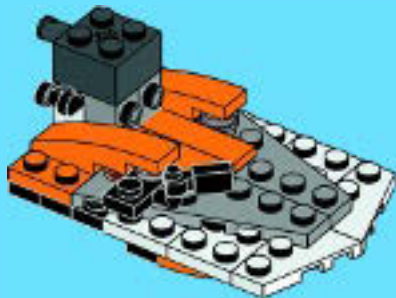 

15

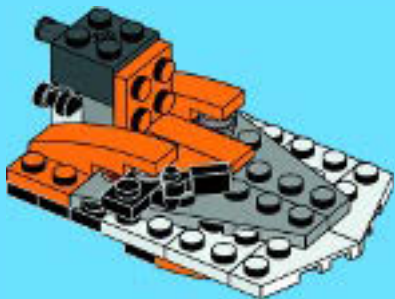 

16





2x  
300401



1x  
4500469



2x  
379501



1x  
4179874



1x  
4179875



1x  
4288960



1x  
6099483



2x  
307026



2x  
302326



2x  
371026



3x  
366626



2x  
4569733



2x  
6039869



1x  
4599984



2x  
6015891



1x  
3005741



1x  
3005748



2x  
6055069



2x  
6037750



2x  
4177932



1x  
4159007



2x  
4620693



1x  
4158355



1x  
4121741



2x  
4244368



2x  
4222960



2x  
4558953



1x  
4282789



1x  
4282786



1x  
4211046



2x  
6000606



4x  
4633691



**Customer Service**

**Kundenservice**

**Service Consommateurs**

**Servicio Al Consumidor**

**LEGO.com/service or dial**



**00800 5346 5555 :**



**1-800-422-5346 :**

