



Инструкция ЛЕГО (Lego) 31033-3

CREATOR

31033



LEGO.com/creator



1x

1



2



2x

2





1x

3



1x

4





1x



1x

5



4



 
2x



1x

6

1



2





2x



1x

7



2x

8





1x



1x

9



6



1x



1x

10





2x



 
1x




1x

11

1



2

 


2x



1x

12

 1



2





2x

13



8



2x



1x

14





2x



1x

15



1x



1x

 
16

 




2x

17

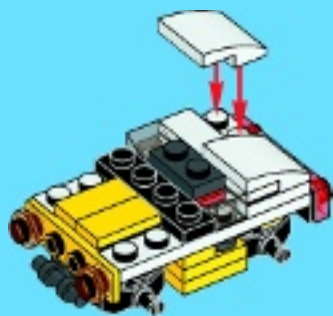





18





19



  
4x

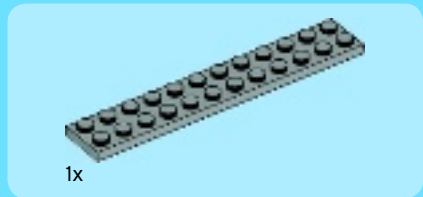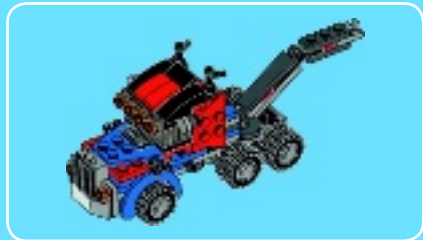

1

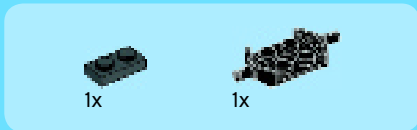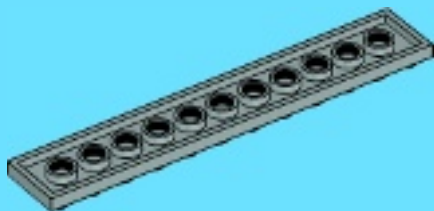  


2

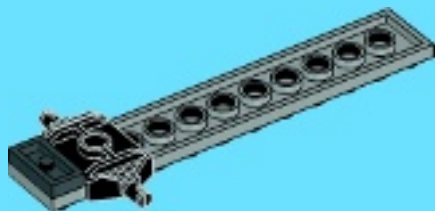 



2x

 3

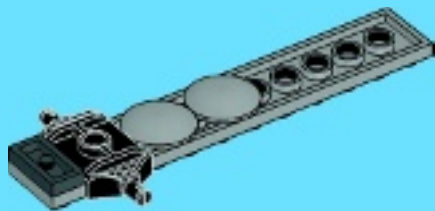


1x



2x

 4

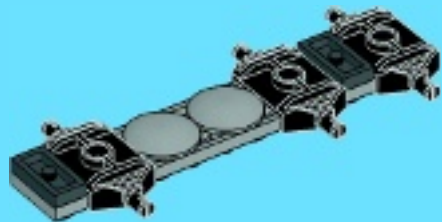



1x

 


1x



1x

5

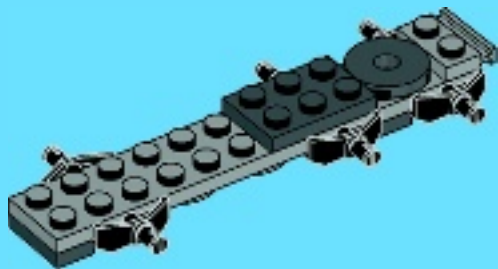



1x



1x



1x



1x

6

1



 
2



3



4

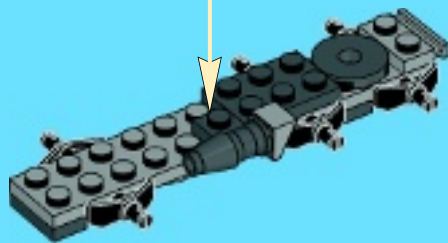



1x



1x



1x



1x

7

1



2



3



4





1x



1x

8



1x



1x

9





2x

10



18



2x

11





1x

12



1x



1x

13

1



2





1x



1x

14



2x



2x

15



 


2x




2x

16

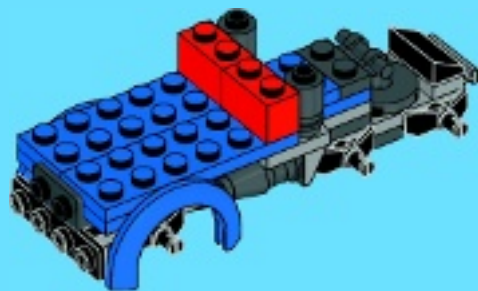

1x

 17

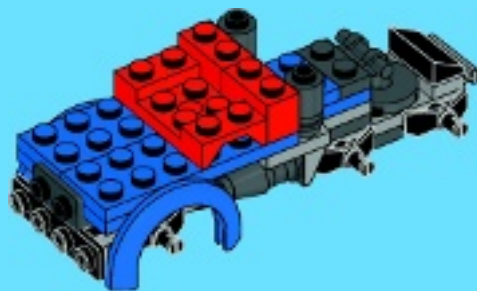




2x



1x

 18

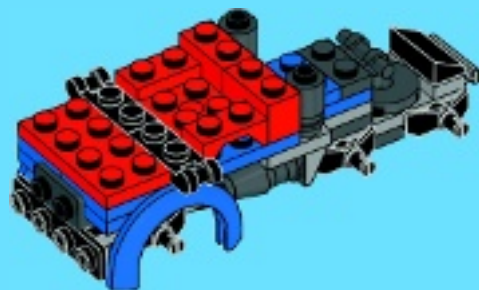


1x



1x

 19

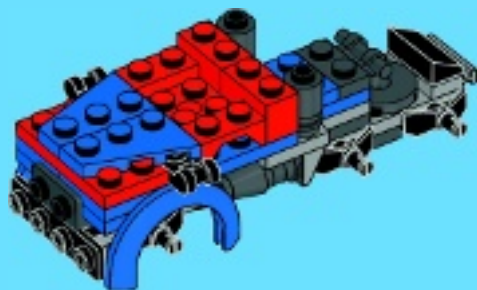



2x

 


1x




1x

20

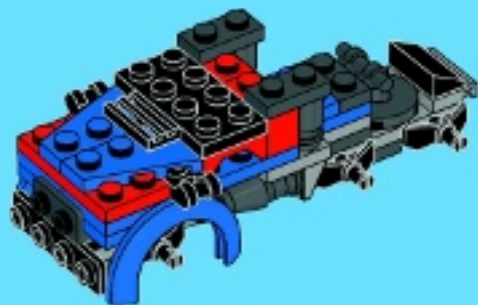

1x

 
21

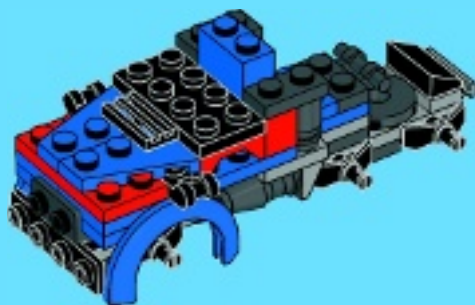






2x

  22

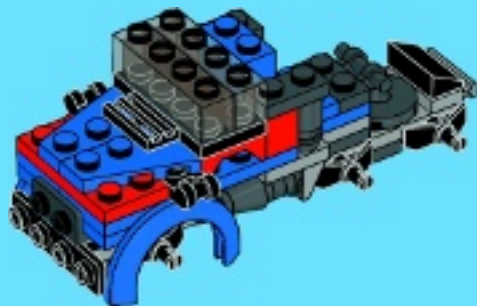

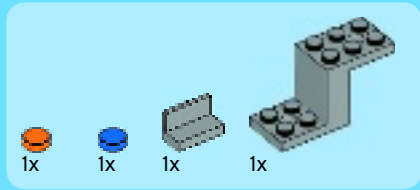



23

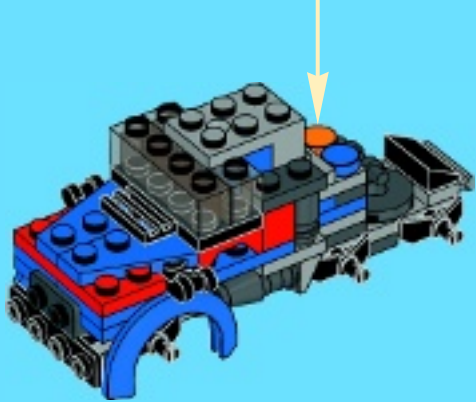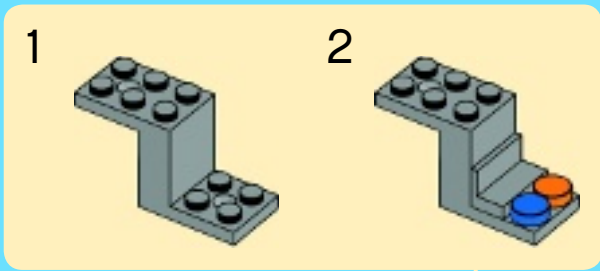  



2x

  24

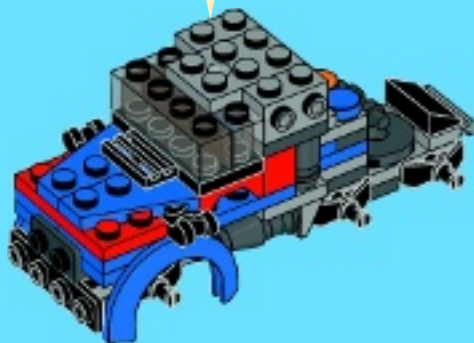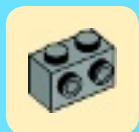




2x



1x

 25

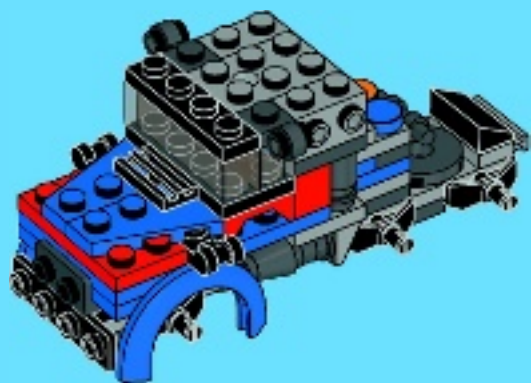

2x

 


1x



1x

26

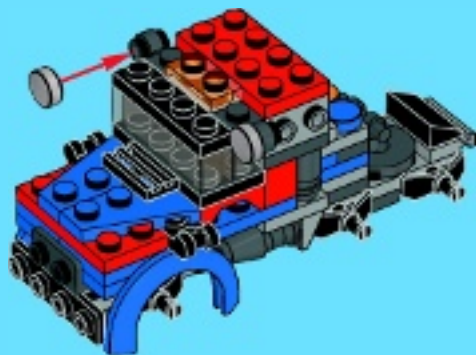




4x




1x

27

 1



2

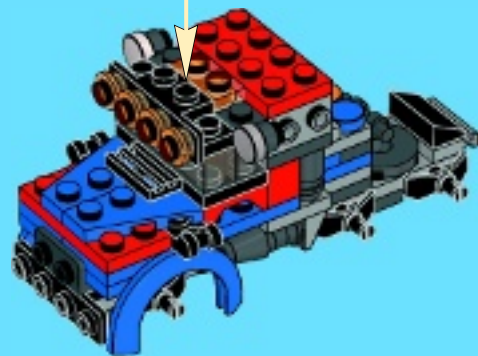 



2x



2x

28

 


2x



1x


29

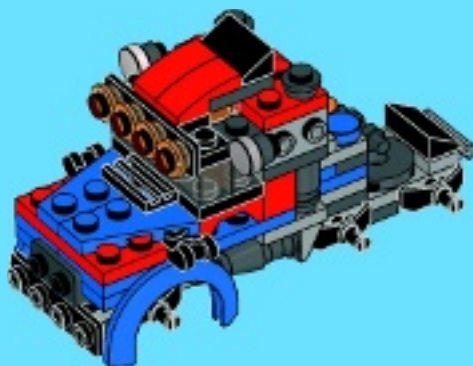



2x

 30

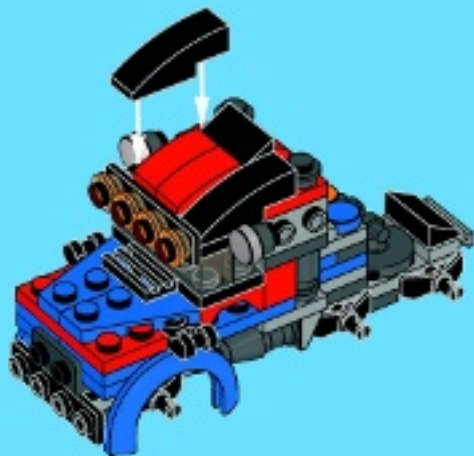




2x

31



2x

 32

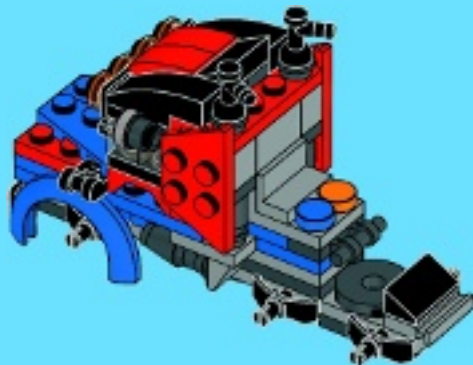



2x



1x



2x



2x



1x



1x



1x

33

1



 
2

 


3




4

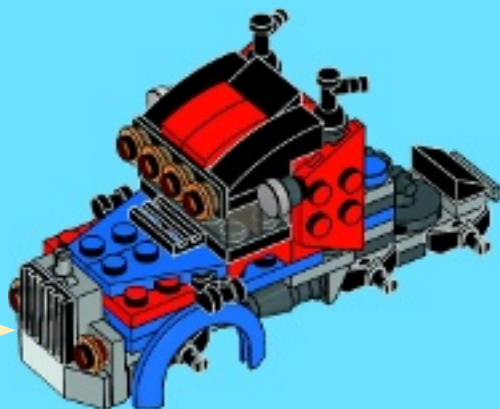

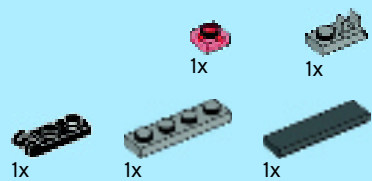

34

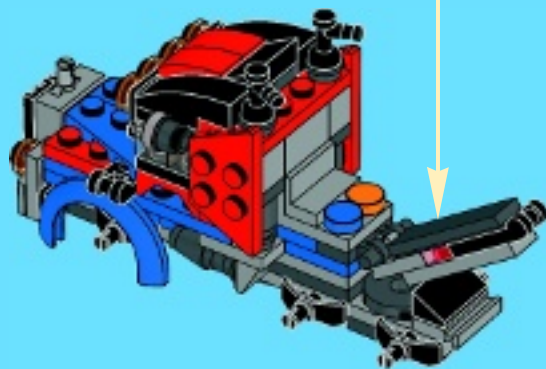 



1x



2x



 
1x



1x

35


1

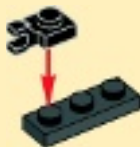

2



 3

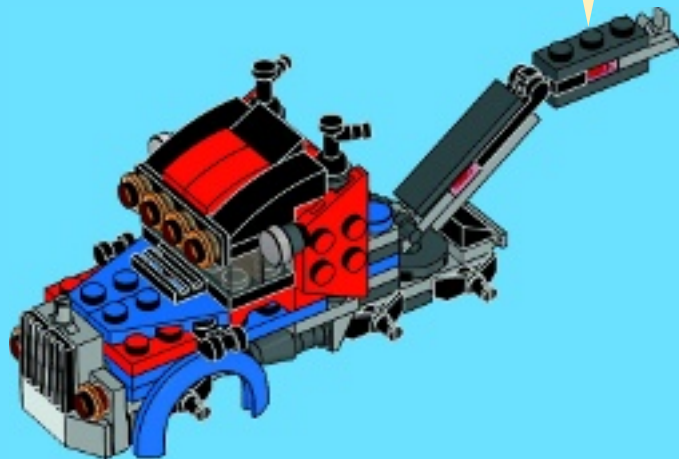




6x




6x

 36

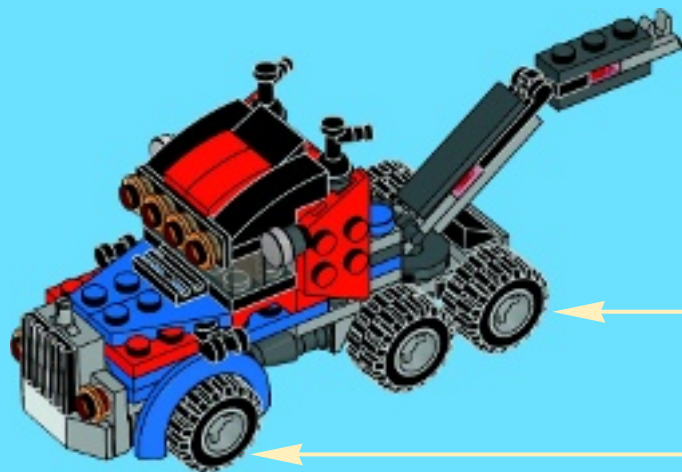

6x

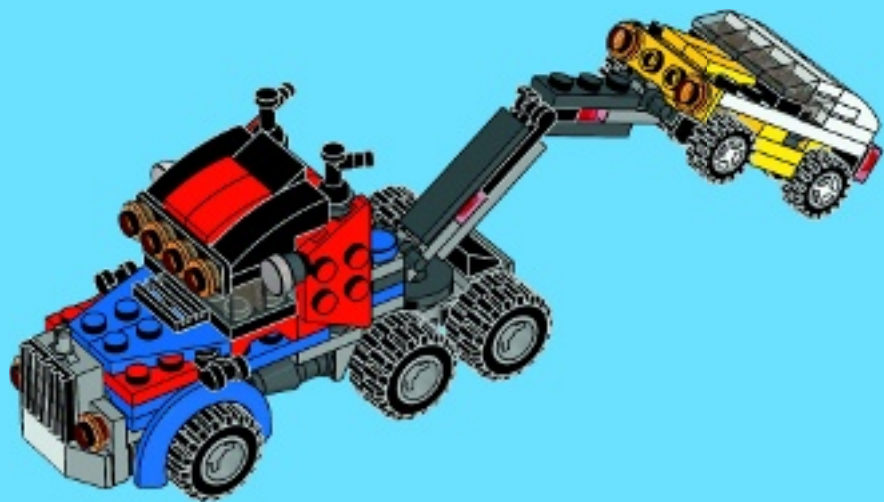 



2x
301001



3x
6047220



2x
4249112



3x
306901



2x
302001



2x
366601



4x
462401



2x
243101

38



6x
3000841



1x
6009459



2x
4280341



10x
4222960



3x
300421



2x
6029946



2x
302021



2x
6023770



1x
4600176



2x
302223



3x
371023



1x
6009460



2x
4206330



5x
300423



2x
6055065



1x
4498155



1x
4498156



2x
6045938



2x
6055429



6x
379523



1x
4243815



2x
300524



3x
306924



5x
302324



1x
4282745



3x
302024



2x
4600177



2x
4548180



1x
4565323



1x
383226



2x
4517925



4x
371026



6x
4568644



7x
615726



4x
6089577



4x
302026



3x
3200126



2x
459926



4x
241226



2x
6047276



4x
4515368



2x
4251161



12x
4578677



1x
4121715



2x
4655241



6x
4244368



2x
4226179



2x
4198311



3x
4211445



2x
4278273



3x
4211444



4x
6015344



1x
4646512



2x
4598526



2x
4211568



4x
4521921



6x
4211515



1x
4646513



1x
6012653



1x
4211360



8x
4211506



6x
4211764



4x
6018081



12x
4210633



2x
4211133



2x
6042955



2x
4211043



2x
4211053



10x
4211063



1x
6055313



2x
4210651



3x
4560184



2x
6071261



1x
4239373



2x
4529240



2x
4211090



4x
4632574



1x
6000606



2x
4210660



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346



club

TM

1



LEGO.com/club

2



3

